

Workflow

**Original Bungard** 

ALUCOREX **SMD Stencils** NE-CUT StenPrint 3000 Filmstar-PLUS **UV-Laser Direct Hellas LED EXP 3040 LED** Jet 34d Splash Splash Center DL 500 Titan 3500 Sprint 3000 AquaPur 1000 lonex PCB-Lab Favorit Variodrill Solide carbide

**Etching or milling** 

# CONTENTS

**Basisline or Profiline** Page 4-5 Presensitized boards Page 6-7 Special boards Page 8 FR4 thin laminate Page 8 Cotherm Page 9 Presensitized aluminium Page 9 For solder paste application Page 10 Board cutter Page 10 **Stencil Printer** Page 11 Photoplotter Page 12 Laser direct imaging Page 13 Double sided vacuum exposure unit Page 14 Parallel beam exposure units Page 15 Spray etching machine Page 16 Spray etching machine Page 17 Spray etching machine Page 18 Conveyorised spray etching machine Page 19-21 Rotation spray etching machine Page 22-23 Conveyorised spray etching machine Page 24-25 Waste water treatment system Page 25 Waste water treatment system Page 26-27 Lab accessories Page 28 Through-Hole plating Page 29 PCB drilling machine Page 30 Drills and routers Page 31 Comparison

Page 32-33

**QualityScan 3000** IsoCam Compacta 30 Compacta 40 2 CU HitecPlate 3040 Protec 2030 + 3040 **RLM 419p RBM 300 RBM 402 KF** AIR 2000 / ULX 110 RDC 15 / RDC 21-K RDC 30 Multidip / Multi-Coater **SMT 3000** HotAir 06 SMT 3000 ECO Basis Print Star 3000 / HotAir 3000





**Multi-Coater** 

RMP









### **Overview CNC machines** Page 34-35 CCD/2 Page 36-43 CCD Page 44-47 CCD/XL Page 48-51 CCD/Premium Page 52-53 Accessories Page 54-55 **CNC** Software / Modules Page 56-61 **Process control** Page 62-63

**CNC** Software Page 64-65

Through-Hole plating line Page 66

Through-Hole plating line Page 67

Through-Hole plating line Page 67

Through-Hole plating line Page 68

Surface treatment Page 69

**Dry film Laminator** Page 69

Brushing machine Page 70

Brushing machine Page 71

Conveyorized PCB dryer / Oven Page 72

Dip coaters Page 73

Dip coaters Page 74-75

Pick&Place Page 76

Reflow Oven Page 77

Manuel Pick&Place Page 78 Stencil Printer / Reflow Oven Page 79

Multilayer press Page 80-81

Worldwide Page 82-83

# WORKFLOW

### Professional PCB production including galvanic PTH

### solder mask... Components printing... upgradeable to multilayer
































film production with Bungard Filmstar

(RLM 419p)

BASISLINE

raw material cut to size

(Ne-Cut)

⊥

**CNC-drilling** 

(BUNGARD CCD/2)

Ŧ

Ŧ

vacuum exposure (Hellas LED)

₽

spray developing (Splash / Jet 34D)

spray etching stripping of etch resist (Splash Center)

Ŧ

brush cleaning (RBM 300) Ŧ electroless tin (SUR-TIN)

Ŧ lamination of solder mask (RLM 419p)

exposure of solder mask (Hellas LED)

Ŧ

JUSE DECK

100

spray developing (Splash / Jet 34D)


Ŧ


curing of solder mask (Hellas LED or hot air oven)


CNC-V-cut or CNC-routing (Bungard CCD/2)


Latest and updated product specification is published under www.bungard.de C 04/2023 Bungard Elektronik



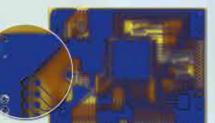

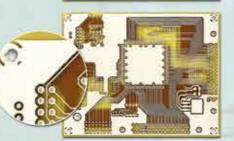

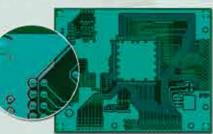

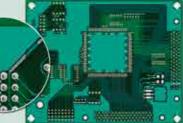



vacuum exposure (EXP 3040 LED) ₽

(DL 500)

spray etching stripping of etch resist (DL 500)

> brush cleaning (RBM 402 KF)


> > ₽

electroless tin (SUR-TIN)

lamination of solder mask (RLM 419p)

exposure of solder mask (EXP 3040 LED)

> spray developing (DL 500)



+



raw material cut to size (Ne-Cut) Ŧ

CNC-drilling (BUNGARD CCD) ₽

PROFILINE

brush cleaning

lamination of etch resist

film production with Bungard Filmstar

₽ spray developing

Ŧ

₽

ŧ

Ŧ


+

₽

CNC-V-cut or CNC-routing (Bungard CCD)

Latest and updated product specification is published under www.bungard.com © 2024/2025 Bungard Elektronik

10-16-






0

-----



**Bungard Line** Proposals

Sample Components printing

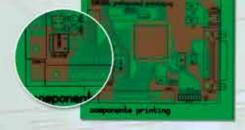




### Sample outside multilayer

inside multilayer



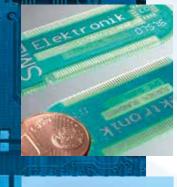



# **ORIGINAL BUNGARD**

### PRESENSITIZED BOARD

The name ORIGINAL BUNGARD stands for highest quality and processing safety of presensitized laminates. Like no other comparable product, this material allows a fast, flexible and faultless production of PCBs in small series and prototypes.

We use first-choice laminates approved and certified by UL, NEMA, DIN, IEC and others.

Several types of laminates, i.e. FR2, FR3, CEM1, and FR4 are available in thicknesses of 0.5, 0.8, 1.0, 1.6, 2.0 and 2.5 mm with either 18, 35 or 70 microns copper. The max. panel size is 510 x 1150 mm. Our cutting service provides sheets down to 50 x 50 mm min. size, with an accuracy of 0.1 mm.

PHOTORESIST

We coat the laminates with a special positive working liquid resist made according to our own recipe. The resist features highest exposure sensitivity, short processing turns and large processing latitude. The equal and dust-free coating has a defined thickness of  $5\,\mu$ m. The maximum spectral response is in the range of 350 - 400 nm. The line resolution is limited only by the type of exposure unit. Typical exposure times are 90 seconds on a set with fluorescent neon tubes. The resist

allows multiple exposure.

Referring to our special developer, at 20 °C the developing time is less than 45 seconds. On the other hand, the resist is absolutely stable for more than 5 minutes in the developer. It is resistant to acid etching or galvanic chemicals and even permits alcaline etching at a ph-level less than 9.5.

The boards are protected against mechanical damage and unwanted exposure by a special, blue coloured adhesive foil. Due to this protective foil, no flitters appear when cutting or milling the boards.

Each board is subjected to chemical and physical controls and tests before and after coating.

A shelf live of more than 1 year under normal storage conditions is guaranteed. Even 10 year old boards still work.

### PRE-SENSITIZING SERVICE

We can coat boards that you supply with photoresist. The max. board size is 530 x 1160 mm, the min. board thickness is 0.3 mm. Our pre-sensitizing service includes cleaning, double sided coating in dip technology, pre-aging, optical control and protection foil. Attention: dip rim 10mm on top and drip rim of 10 mm at the bottom will reduce usable size by 20 mm on the short side (530 mm will go down to 510 mm). The rim is on request removed without charge.

### **BUNGARD NEGATIVE PHOTO-**COATED BASE MATERIAL

As an alternative to our Bungard Positive Liquid Resist, you can also have all raw plate formats coated with a negative-developing tenting resist. In contrast to the liquid, approximately 5  $\mu$ m thick positive resist, the negative resist is  $35 \,\mu m$  thick and is laminated as a film and packaged in a light protection paper.

In this resist, the exposed areas are hardened by the light and remain on developing; The film template must therefore be created as a negative. The exposure time on the Bungard Hellas is approx. 25 s and after the exposure a color change from light blue to dark purple can be seen directly. You need special negative developer. Negative laminate is advantageous in longer etching processes (e.g., with thicker SMD stencils) because the resist will withstand the spray beam longer by the larger resist thickness. Disadvantage is the sensitivity and short shelf life. Order only the currently required need and process the plates as soon as possible and only in the yellow room condition.

We also distribute laminators and photoresists on roll for self-laminating.

### STANDARD CUTTINGS FR4

### Format (mm)

1.5 mm 35 μm Cu	1.5 mm 70 μm Cu
210 x 300	210 x 300
200 x 250	200 x 250
150 x 250	150 x 250
160 x 233.4	160 x 233.4
150 x 200	150 x 200
125 x 175	125 x 175
100 x 160	100 x 160
75 x 100	75 x 100

### PANELS FR4

Format (mm)			
0.5 - 1.5 mm 18 μm Cu	0.5 - 2.5 mm 35 μm Cu	0.5 - 2.5 mm 70 μm Cu	1.5 r 105
510 x 570 x 0.5			510>
510 x 1150 x 1.0 510 x 570 x 1.0	510 x 570 x 0.8 510 x 1150 x 1.0 510 x 570 x 1.0 510 x 1150 x 1.5	510 x 1150 x 1.0 510 x 570 x 1.0	
510 x 570 x 1.5	510 x 1150 x 2.0 510 x 570 x 2.0 510 x 1150 x 2.5		
	0.0 A 07 0 A 2.0	0.0 A 07 0 A 2.0	

### PANELS FR2

Format 480 x 1000 x 1.5 mm 35  $\mu$ m Cu single or double sided

### PANELS FR3

Format 510 x 1150 x 1.5 mm  $35 \,\mu m$  Cu double sided


### PANELS CEM1

Format 510 x 1150 x 1.5 mm  $35 \,\mu m$  single sided


### **CUTTING SERVICE**

We cut down all boards to non-standard sizes on request. The maximum board size is 510 x 1150 mm, the minimum size is 50 x 50 mm. Remains will be included. Boards >= 2 mmwill be cut by saw. Saw cutting loss will be 3 mm per piece.

mm 1.5 mm FR4 blue/black 35 µm µm Cu x1150x1.5 510x1150x1.5

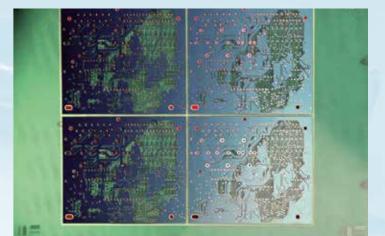



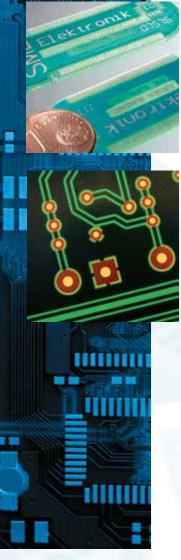

### SPECIAL PURPOSE LAMINATES

Besides our ORIGINAL BUNGARD fotopositive coated base material we offer a wide range of laminates related to pcb manufacturing.

### **Engraving plates**

for Front Panel Engraving. Size approx. 500 x 1000 x 1.5 mm. Black and nature available.

### Technical glass fibre laminate

no copper clad, no photoresist, size: 510 x 1150 x1.55 mm

### Drill backing boards

Drill backing boards for drilling pcbs e.g. with the BUNGARD CCD.

in stock: 500 x 1000 x 2.5 mm

500 x 1000 x 6 mm

245 x 330 x 6 mm

### Multilayer production

Prepregs (250 x 350 x 0.2 mm)

outer layer (FR4 250 x 350 x 0.3 mm 18/00)

inner layer (FR4 250 x 350 x 0.5 mm 18/18)

### separation foil

(packing size for Prepregs and separation foil 50 pcs. each)

### **Copper clad laminates**

FR4, CEM1, FR2, without photoresist. Approvals and standards as for presensitized boards.

The copper surface is not yet brushed.

### FR4, panel size 510 x 1150 mm,

- Thickness 0.5 mm; Copper clad 18 μm, 35 μm and 70  $\mu$ m; single or double sided
- Thickness 0.8 mm; Copper clad 18 μm and 35  $\mu$ m; single or double sided
- Thickness 1.5 mm; Copper clad 5  $\mu$ m; single sided; Copper clad 18  $\mu$ m, 35  $\mu$ m, 70  $\mu$ m and 105  $\mu$ m; single or double sided
- Thickness 2.0 mm; Copper clad 35  $\mu$ m and  $70\mu$ m; single or double sided
- Thickness 2.5 mm; Copper clad 35 μm and 70  $\mu$ m; single or double sided

### CEM1

panel size 510 x 1150 mm, Thickness 1.5 mm Copper clad 35  $\mu$ m single sided

### FR2

panel size 500 x 1000 mm, Thickness 1.5 mm Copper clad 35  $\mu$ m single sided or double sided.

FR2 is perfect for isolation milling, because routers and drills will last much longer.

### **BUNGARD COTHERM:**

For many applications customers demand a better thermal dissipation. One possible solution for heat problems are so called metal core boards, which consists of a 35  $\mu$ m copper layer, a 100  $\mu$ m isolation layer (FR4) and a 1000-2000 µm Aluminium layer.

Bungard offers this PCB type with brand name

### Metal core board:

Cotherm 1000/100/35 µm: Format 530 x 1150 mm (1,0 mm; 1 x 35 CU)

Cotherm 2000/100/35 µm;

Cotherm. Cotherm is available with or without photosensitive resist and in these formats:

### SURFACE:


If you use ORIGINAL BUNGARD Photopositive Coated PCBs, there is a simple technical alternative to protect the surface of your PCB:

### Step 1:

Etch your ORIGINAL BUNGARD PCB as usual

### Step 2:

Develop the photoresist after etching once again with a negative film (solder PADs open).



Step 3:

This procedure is not widely known, but gives excellent results. Good solderability on the pads, nice optic and no extra costs!



### **FR4 THIN LAMINATE**

### in 0.125 mm and 0.2 mm thickness

For semiflex application and multilayer!


The Bungard semiflex base material combines the advantages of the simple processing of the Bungard standard base material with flexibility for special applications.

### **Board formats:**

100 x 160 mm 35 μm Cu

210 x 300 mm 35 μm Cu

510 x 1150 mm 35 μm Cu

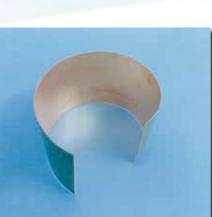

Please note that we sell boards of 100x160 only in units of 35 and 210x300 only in units of 8 boards.

### **ALUCOREX** PRESENSITIZED ALUMINIUM

This product is perfectly suitable to manufacture front panels, machine or information plates as well as tampon printing clichés. ALUCOREX consists of an aluminium alloy which is anodized in a unique treatment sequence. After anodizing we coat the boards with a specially adjusted, high-resolution and resistant positive photo-coat. To protect the coat from mechanical damage or unintentional exposure we provide the boards with a light protection foil.

Making a front panel from ALUCOREX is simple and safe. The procedure takes only minutes and you need no equipment besides an exposure unit and a developing tray. The main steps,

- exposure and
- developing

take together only 5 minutes.

The colour of the ALUCOREX-boards is already established in the scratch, light and chemical proof anodized layer. The exposed parts of this layer are removed during the developing process.

Image transfer can be done either positive or negative. With a positive image you receive a blanc background and coloured writing or image. With a negative image you will receive a coloured background with blanc writing.

The front panels can easy mechanically processed. With careful handling they can be drilled and punched through the protection foil before exposure. The specially adapted developer is neutralized after the job and can be disposed into the drain. No hazardous waste is created.

One ALUCOREX panel is 480 x 980 mm. We deliver the material in these colours: black matt, black brilliant, red, green and blue brilliant.

- Black matt is available in 0.5, 1.0, 1.5, 2.0, 2.5 and 3.0 mm thickness
- Black brilliant in 1.0, 1.5, 2.0 and 2.5 mm.
- Red and Blue brilliant (both

sides are usable) is on stock in 1 mm thickness, as well as the green brilliant clichés, which is only single sided usable

On request we cut down the


**Cotherm 1500**/100/35 μm; Format 530 x 1150 mm (1,5 mm; 1 x 35 CU)

Format 530 x 1150 mm (2,0 mm 1 x 35 CU)

Cotherm can be processed like normal base material. Please note, that the isolation layer is very thin. With unskilled mechanical processing you can create contact between the copper layer and the aluminium layer. When etching, the aluminium must be completely covered against the attack of the etching agent. This is why we put protection foil on both sides of the Cotherm board.




Apply our immersion tin SUR-TIN just to the now open PADs. The photoresist

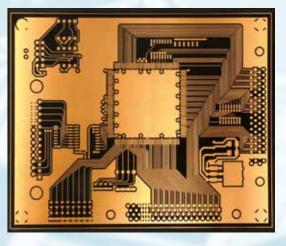

boards according to your wishes till board size 50 x 50mm. Being stored in a cool and dry condition the material has a guaranteed shelf life warranty of up to one year. Tests have shown that even 10 year old material can still be processed.

colour deviatio possible

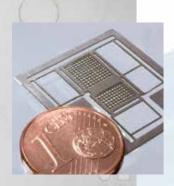

**SMD STENCILS** 

### FOR SOLDER PASTE APPLICATION

From now on, there is a quick, cheap and easy way to make your metal template on your own. With already existing machines and without interference of existing processes.

To do so we offer both positive or negative presensitized metal templates in many dimensions, in different thicknesses and hardnesses.

Being coated with a chemically resistant photoresist of high line resolution and steepness, these templates offer you all the advantages already known from the presensitized laminates for PCBs.

Brass boards are available in 500 x 1000mm. Thicknesses: 0.2, 0.3, 0.4, 0.5, 0.8 and 1.0 mm. Other thicknesses on request possible.

German Silver (CuNiZn) board size 280 x 1000. Thicknesses: 0.1, 0.15, 0.2, 0.3, 0.4 and 0.5. Other thicknesses on request possible.





### **BOARD CUTTER**

The Board Cutter Ne-Cut was specially developed to cut PCBs up to 3.0 mm of thickness or aluminium up to 1.5 mm. If desired cutting of steel sheets up to 1mm or plastic up to 5 mm is possible as well as cutting of film sheet material or paper. With the transparent hood and the removable downholder you can cut pieces "on sight".

### Features

- Cutting width max. 530 mm
- Two blades made of hardened and ground steel

- Spring loaded built-in clamping unit in the front (removable)
  - Bedstop with metric scale in the right front
  - Fully adjustable back stop with metric scale for batch work (0...300 mm)
  - Angle and scale tolerance 0.1 mm
  - Durable full steel construction
  - All important parts angular adjustable
  - Simple exchange of blades
  - Adjustable cutting angle
  - Adjustable clearance

### NE-CUT

Sizes (LxWxH):

740 x 450 x 290 mm

66 ka



# **STENPRINT 3000**

### STENCIL PRINTER

The StenPrint3000 is a manual printing system with a stable base for a high print quality. The solid construction provides clean and reproducible pressure with simple handling, even with small components and fine structures down to 0.5 mm.

It is ideally suited for the production of prototypes and small series.

In the basic model, one-sided and doublesided printed circuit boards can be printed with the help of the magnetic circuit board holders.

For this purpose, the circuit boards are fixed on the base plate and supported by the magnetic circuit board holders. By means of rotary knobs, the print alignment can be performed quickly and easily in X-Y and Theta axis.

A parallel lift ensures a clean separation of the printed circuit board and stencil and guarantees a perfect print image.

VARIATIONS

Stencil holder frame

Three types of stencil supports are available.

For the simplest of tasks, there is the universal

stencil holder frame in which the stencils can

be easily clamped without tension.



For double-sided printing you can fix the pcb with the magnetic pcb-holders (this is mandatory when using the universal stencil clamping frame)

Stencil clamping frame Optimal is the use of the universal stencil clamping frame. Various stencil sizes can be used here. The tensioning is carried out from two sides. No perforation of the stencil is required.





### **STENPRINT 3000**

Dimensions (LxWxH)

Clamping frame size Table / usable area

Theta adjustment range

PCB size / usable area

PCB size / usable area

With stencil clamping frame

Floor space

Parallel lift

Template size

Template size

Weight

400 x 640 x 150 mm 545 x 360 mm max. 460 x 30 x 355 mm max. 390 x 290 mm Adjustment range X / Y +/- 7,5 mm +/- 3° 2 mm approx. 15 kg plus options With stencil holder frame

> max. 420 x 320 mm max. 380 x 280 mm

max. 360 x 280 mm max. 330 x 270 mm

With magnetic holder set for two-sided printing: Circuit board bottom max. 18 mm

### Mounting rail

The third option is a mounting rail for the use of fixed aluminum frames or common quick-release systems.



 $50\mu$ m Leiterbahn und Abs

In past , table &

-----

Coster a contra da

-C ALBERT MAN

Reporte presidente, tran co douter

And to purability, and a feat

17

18

# **FILMSTAR-PLUS**

### PHOTOPLOTTER


Filmstar-Plus is the name of the next generation of our bitmap photoplotter series. Optimized for inhouse production of high end film layouts at reasonable price level the system can directly proceed (extended) Gerber files (RS 274X or RS 274C) or b/w bitmap (.bmp) files.

Filmstar, your nicely designed partner in cost effective production of your required film artworks.

### Features:

- Film is fixed on a rotating drum. A highly focused red light laser diode is moving stepwise alongside that drum, driven by a precise stepper motor with worm and gear drive. Of course, all settings are software adjustable, calibrated and controlled.
- Film data read in either by USB connection to your computer or by USB stick.
- Full software package belongs to extend of delivery. It offers all required functionality like film arrangement, reverse and mirror image selection, preview, print preview, editing of aperatures (e.g. for 10 soldermask films oversizing) and lots more.



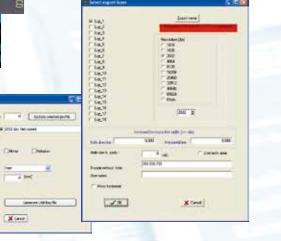



### Features:

- Precise edge definition in photo quality
- · Perfect blackness results in perfect opacity
- Extended software package included in delivery

### Improvements compared to Filmstar FP 8000:

- Higher resolution, up to 16 256 x 25 400 dpi
- Stand alone unit no separate PC necessary. Data can be transferred to the plotter either via USB stick or via USB cable
- New electronics with Touch-Display and intuitive user interface
- Software update: customized Windows optics, Windows routine for opening and saving of files. Higher resolutions in Gerber2bitmap, various calibration programs in Run\_Photo\_USB
- 3 different plot speeds for either high precision or less time consumption

# FILMSTAR-PLUS

	max. film size
ıll	250 x 380 mm <sup>2</sup>
ndard	390 x 380 mm <sup>2</sup>

Smo

Star

XL

max. plot format 230 x 360 mm<sup>2</sup> 360 x 360 mm<sup>2</sup>

- 380 x 460 mm<sup>2</sup> 360 x 430 mm<sup>2</sup>
- output resolution from 1625 ... 16256 dpi x 12700 dpi (25400 dpi internally)
- Plotting speed: 7 mm of film width (x 365mm film length) per minute for 2032 dpi. (20% quicker at 1625dpi, half speed for 4064 dpi)
- Source of light: Laser diode 670 nm (red)
- Data input: Gerber (RS 274D, RS 274 X), high resolution BMP
- Photoplotter software, included on CD:
- Gerber viewer; automatic aperture converter for all known electronic CAD layout systems
- D-code editing, output preview & print
- Interactive, absolute or relative image positioning, film and drill panelization
- Reversed (negative) plotting, image mirroring
- Control software requires computer with Windows XP<sup>™</sup> to Windows 10<sup>™</sup> (64-bit), USB port

Dimensions (LxWxH): Weight: Power supply

700 x 350 x 200 mm approx. 20 kg External power supply 110V-240V / 24V-2A

# **BUNGARD LASER DIRECT IMAGING** (LDI)

Bungard LDI, UV laser direct imaging system for all common types of photoresists.

Target Customers are electronic developers with frequent layout changes, who want to process their PCB prototypes (e.g. antenna structures), in wet processing technology according to industrial standards. Most samples shown here were typically made in about 3 minutes.

The laser head has a resolution better than 50 microns and will be available either as an add on item for existing CCD machines as well as a complete CNC system that can not only expose but also drill and route.

The Bungard Laser Direct will be able to expose a Eurocard pcb in about 15 minutes, depending on the packing density and aspect ratio. To control the laser unit the software LaserPro is required. In LaserPro travel speed, travel height, light energy and start delay (Prelight) can be set for currently 1 - 15 tools.


LaserPro processes HPGL data (HPGL 7475A) in the same manner as the other operating software for the Bungard CCD RoutePro and DispPro. If necessary, the CAD-CAM software IsocamPro is required to convert Gerber Data into HPGL travel paths.

After exposure, the boards can be developed and etched like our normal presensitized base material. The Bungard LDI does not remove copper from the substrate. When lasering copper dangerous gases are produced, that need special collecting neutralizing and disposal measures. In our opinion, etching is the far more user friendly option.

With the Bungard Laser Direct Imaging prototypes can be realized more quickly and accurately than with previous technology. For small series production, we still recommend to make a layout film with the Bungard Filmstar and expose with the Hellas or - for finer resolution - with the EXP 3040 LED

a auote!

0 2 8

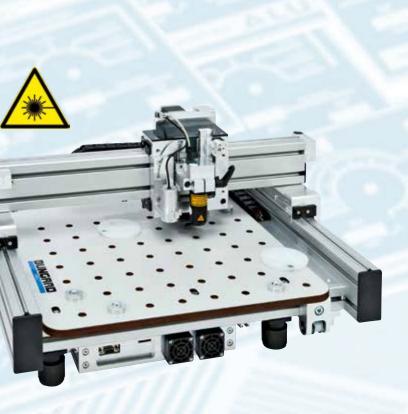

The Bungard Laser head and the software LaserPro are offered at an unbeatable price. They can be retrofitted to all Bungard CCD machines younger than in 2006. Ask us for





### LASER DIRECT IMAGING

Laser class: Power Dimensions (LxWxH): Safety:

class 3B 120 mW 47 x 47 x 110 mm

- a) Magnetic safety switch; laser turns on only if the unit is mounted facing downward into the CCD holder
- b) PVC-protection cover with door switch and filter screens recommended

Via Bungard CCD Power connection: Control: Via Bungard CCD/RoutePro3000 Bungard CCD Requirements: Software RoutePro3000

### Laser-License for RoutePro3000

### Application

Exposure by UV-laser diode; wave length approx. 406 nm; suitable for positive- and negative photoresist, solder mask and Alucorex

# **HELLAS LED**

### VACUUM EXPOSURE UNIT

High precision vacuum exposure unit especially designed for double sided contact exposure of presensitized base materials such as tampon printing clichés, PCBs, front-panels, daylight films and other UV sensitive coatings.

### Features

000000

0000000000

l eiterbahn und 

- The Hellas LED 1S is equipped with 42 LEDs and the Hellas LED 2S with 84 LEDs, mounted over a special reflector on each side
- Special reflectors for minimum undercut
- Less energy consumption
- longer worklife of the lights (now +- 10.000 hours)
- guickstart (less than 1 second)
- maintenance free

- Analogue light emission display
- Lower exposure surface from 8 mm special glass
- Upper exposure area from structured mylar foil in a sturdy frame
- Working area 575 x 365 mm
- Suitable for fine-line PCBs
- Maintenance free vacuum (>60%) with gauge display, 1380 l/hour continuous rating
- Digital timer 1 second 9 min 59 sec. with count-down, auto-reset and beeper
- Built in cooling fan allows long time exposure or baking processes
- Separate choice of upper/low exposure possible
- Sturdy steel housing



HELLAS LED	Hellas LED 2S	Hellas LED 1S	Hellas LED 2S XL	Hellas LED 1S XL
Dimensions (LxWxH):	620 x 650 x 240 mm	620 x 650 x 240 mm	680 x 650 x 240 mm	680 x 650 x 240 mm
Weight:	approx. 40 kg	approx. 40 kg	approx. 45 kg	approx. 45 kg
Electrical Connection:	230 V~, 50-60 Hz, approx. 300 W	230 V~, 50-60 Hz, approx. 200 W	230 V~, 50-60 Hz, approx. 300 W	230 V~, 50-60 Hz, approx. 200 W
Exposure area:	approx. 570 x 300 mm	approx. 570 x 300 mm	approx. 575 x 365 mm	approx. 575 x 365 mm
Number of LED	2 x 84	1 x 42	2 x 84	1 x 42
Separate switch on and shutdown of the exposure flat	Yes	No	Yes	No
Permant Exposure	Yes	Yes	Yes	Yes
Cover Switch	Option	Option	Option	Option
Digital timer	Yes	Yes	Yes	Yes
Cross-flow fan	Yes	No	Yes	No
Milky Foil for Clichee	Option	Option	Option	Option

# **EXP 3040 LED**

### HIGH SPEED DOUBLE SIDED EXPOSURE

The EXP 3040 LED is a high speed double sided exposure machine mainly designed for high resolution production of printed circuit boards, stencils and clichés in small and medium quantities !

Two special 50 W LED bulbs ensure almost parallel light.

### Construction

Sturdy aluminum frame construction. The chassis consists of a sliding drawer system.

### Operation

EXP 3040 LED guarantees a perfect exposure within a minimum of time and energy consumption. A touch display allows easy preset and read out of all settings. UV-light emission controllers are not necessary with LED technology because the bulbs have a lifetime of plus 10.000 hours with very constant light emission.






A vacuum pump provides a close and uniform contact between artwork and board. The machines have powerful cooling fans for the LEDs.

### Features EXP 3040 LED:

- Max. Working area 300 mm x 580 mm (recommended: 300 mm x 400 mm)
- Vacuum assisted drawer
- Suitable for fine line PCBs
- Suitable for exposure and curing of solder mask.

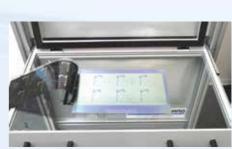



3

20

D 0



### **EXP 3040 LED**

Power suppy:

Fuse: Unit Size (WxDxH): Weight

90-230 V, 50-60 Hz, 1-phase, 4 A, 800 W 5 A 780 x 820 x 1620 mm 120 kg

# **JET 34D**

### SPRAY ETCHING MACHINE

Powerful spray etching or spray developing machine mainly designed for use in pcb labs. Capacity up to 3m<sup>2</sup>/h possible (single-sided, positive material).

### Features

SPLASH

- Maintenance free system with self-cleaning nozzles
- Etching speed of 35µm Cu within 90 seconds (warm Fe-III-CI)
- Line resolution better than 0.1 mm
- Big lid for easy loading, with built-in security switch
- Recommended board size: 300 x 400 mm (Maximum 350 x 450 mm)
- Small PCBs can be fixed on carrier with adjustable holder
- Easy and clean handling by hinge free lid and handle outside of machine
- If you turn the carrier you can etch double sided
- Overflow wash tank in the front for rinsing etched boards
- Digital timer with countdown, auto-reset and beeper
- Sturdy construction fully made of PVC and titanium



- Suitable for all common etchants. Also well suited for spray developing of dryfilm resist (anti-foam agent recommended)
- Strong 1000 W heater with thermostat and over-heat fuse
- 3 cog valves (etching tank, rinse overflow, rinse inlet)



# **SPLASH**

### SPRAY ETCHING MACHINE

Spray etching machine for laboratory use with integrated static rinse. Machine is suitable for double sided material. Special emphasis was put on ergonomical and clean etching and rinsing as well as on low chemical drag out.

### Features

- Maintenance free system with self-cleaning nozzles and magnetic pump
- Etching speed of 35  $\mu$ m Cu within 90 seconds (warm Fe-III-CI).
- Big window to the etching chamber made from transparent PVC.
- Maximum board size: 210 x 300 mm. Splash XL: 300 x 400 mm
- Line resolution better than 0.1 mm (100 µm)
- Suitable for all common etchants



position

- by thermostat
- Overheat fuse
- and beeper.
- 3 cog valves for all tanks





**JET 34D** 

Dimensions (LxWxH): approx. 600 x 700 x 1100 mm Working Level: 900 mm 220 V~, 50Hz, approx. 1.5 kW Power supply: Tank capacity: 161 35 kg Weight:

• Lid to the etching chamber with safety

 Removable board holder made from Titanium and PVC. Can be locked in drip-off

• Easy access to the etching chamber. • Strong 1000 W Quarz heater, controlled

• Digital timer with count down, auto reset

• Integrated rinsing zone with drip off holder. • Suitable for spray developing

BUNGARD





### **SPLASH**

Power supply: Dimensions (LxWxH): Working Level: Etchingformat Weight: Tank capacity:

230 V~, 50 Hz, approx. 1,5 kW 600 x 660 x 1200 mm 900 mm 210 x 300 mm 35 kg approx. 23 l

### SPLASH XL

**Power supply:** 230 V~, 50 Hz, approx. 1,5 kW 800 x 650 x 1200 mm Dimensions (LxWxH): Working Level: 900 mm Etchingformat 310 x 400 mm Weight: 40 kg Tank capacity approx. 35 l



# SPLASH CENTER

### SPRAY ETCHING MACHINE

Laboratory etching machine with static and spray rinse, integrated developer tank, a reserve tank for e.g. chemical tinning and a squeeze dryer. The Splash-Center is suitable for double-sided PCBs. Special emphasis was put on ergonomical and clean etching and rinsing as well as on low chemical drag out.

### Etching compartment:

- Maintenance free etching system with solid stream nozzles
- Etching speed of  $35 \,\mu\text{m}$  Cu within 90 seconds (warm Fe-III-CI).
- Big window to the etching chamber made from transparent PVC.
- Maximum board size: 210 x 300 mm /Splash-Center XL: 300 x 400
- Line resolution better than 0.1 mm (100  $\mu$ m)
- Suitable for all common etchants. Fe-III-CI recommended
- Lid to the etching chamber with safety switch

- Removable board holder made from Titanium and PVC. Can be locked in drip-off position
- Easy access to the etching chamber.
- Strong 1000 W Quarz heater, etching temperature controlled by thermostat
- Overheat fuse
- Digital timer with count down, auto reset and beeper.
- Integrated rinsing zone with drip off holder.
- 3 cog valves for all tanks
- Suitable for spray developing

### Developer and rinse compartment:

- Magnetic centrifugal pump to revolve developer
- two integrated static rinses, one can be used for neutralization purposes
- Fresh water spray zone activated by foot switch, including splash protection
- A reserve tank, e.g. for immersion tin
- 5 ball valves to drain all tanks, cover protected from the front side.
- All tanks with lids
- Integrated drip tray for all tanks, sure-footed about 120 mm above the ground
- Integrated mechanical squeeze dryer

# **DL 500**

### CONVEYORISED SPRAY **ETCHING MACHINE**

The DL 500 is a double sided conveyorised spray etching machine with integrated rinsing zone. This machine is easy to maintain and fits perfectly to a modern PCB laboratory. The maximum capacity within one hour is 10 m<sup>2</sup>. Designed for being used for laboratory purposes, there are lots of different applications (e.g. spray developing of tenting or solder mask) and options available. Of course the machine can be modified according to your needs.





### SPLASH CENTER

Power supply: Dimensions (LxWxH) Working Level: Etchingformat Tank capacity Weight

230 V~, 50 Hz, 1,5 kW 1000 x 670 x 1200 mm 900 mm 210 x 300 mm | x 23 | + | x |2 | + 3 x 8 |

### SPLASH CENTER XL

Power supply: Dimensions (LxWxH): Working Level: Etchingformat: Tank capacity: Weight:

230 V~, 50 Hz, 1,5 kW 1140 x 770 x 1200 mm 900 mm 310 x 400 mm 1 x 35 I + 1 x 22 I + 3 x 15 I 56 kg

46 ka

### Latest and updated product specification is published under www.bungard.com (C) 2024/2025 Bungard Elektronik

• Sturdy stand alone construction from PVC and Titanium

- spaces on  $18 \,\mu m$  copper
- 1000W guartz heater

cleanina/refillina

• Double sided etching with 4 x 14 flat jet nozzles. Due to special nozzle pattern, there are 6 rows of nozzles for each side !

Adjustable conveyor speed 0 - 1.5 m/min.

• PCB is firmly secured by upper and lower

 Adjustable spray pressure. Upper and lower spray pressure can be regulated separately

• Powerful etchant pump (200 l/min)

Features:

Working width 510 mm

· Joint free belt drive

transport rollers

- Thermostat with digital read out and selfsafe overheat cut-off
- Integrated rinse zone. Optional fresh water rinse with solenoid valve or recycle watertank
- Drying by squeezing rollers with tissue

Page 18



- Transparent top with security switch
- Line definition down to  $35 \,\mu m$  lines and

BUNGARD

- Maintenance free design, just normal
- Easy disassembly and full access to all inner parts without special tools
- Suitable for all regular etching agents. We recommend to use ferric-chloride. Please pay attention to the special features of each etchant (crystallization of persulfates and ammonium, exothermic reactions while etching). For alkaline etching, machine must be modified.

### DL 500

230 V or 400 V, 50 Hz, 1.5 kW Power supply: 1200 x 670 x 1290 mm Dimensions (LxWxH): Etchingformat 510 mm Tank capacity 55 I 100 kg Weight





### Variants of the DL 500

Variant 1: Spray Developing Machine The DL 500 can be used as a spray developing machine for negative and positive etch resist or solder mask without modifications. Simply change the media!

Variant 2: Spray Etching Machine Standard variant

Variant 3: Spray Stripping Machine This machine is equipped with an additional filter basket at the front side of the machine to remove residues of tenting or solder mask from the stripping liquid (see picture on the left).

### **Options for the DL 500** Option 1: Recycling Rinsing Tank

Recycling rinsing tank with magnetic centrifugal pump instead of fresh water. Saves water costs. With a cock drain valve the used rinsing water can be used to compensate evaporation losses or to make up new etching liquid. Waste water free rinsing technique. The magnetic valve from the standard version is here obsolete. The tank fits underneath the machine body of DL 500.

Dimensions (LxWxH): 200 x 700 x 600 mm

### **Option 2: Conveyorised Rinsing Unit**

a.) Conveyorised rinsing unit, stand alone version with adjustable conveyor speed, integrated magnetic valve for fresh water inlet (controlled by DL 500), squeeze drying roller. Transport width and height same as DL 500.

Dimensions (LxWxH): 450 x 620 x 940 mm

b.) As above but second stage cascade rinse (in combination with recycling rinsing tank and magnetic centrifugal pump), 3 way cock valve to bypass rinsing water e.g. to water treatment unit IONEX.

Dimensions (LxWxH): 450 x 620 x 940 mm

### **Option 3: Inspection Table**

Control zone in form of a roller table (not conveyorised). This roller table can be mounted between two DL 500 (e.g. Developer and Etcher), between DL 500 and rinsing unit or as a single exit table.

Dimensions (LxWxH): approx. 620x50x530 mm


### **Option 4: Production Line**

3 DL 500 and the rinsing unit can be connected to a small production line (Developing – Etching - Stripping - Cleaning) coupled together with inspection tables. Of course other variants are possible as well.











Option 5: DL 500 S





### Option 7: Cooler

Some etching agents as well as other chemicals tend to exothermic reactions and need to be cooled during the treatment process. For this purpose we offer a special cooler for the DL 500. The Cooler consists of a recycling rinsing tank with cooling coils for the etching liquid. With a cock valve the etching agent is adjustable bypassed through the cooler.



Option 10: Exit table



This machine is equipped with an additional filter basket at the front side of the machine to remove residues of tenting or solder mask from the stripping liquid.



### Option 6: DL 500 Vario

DL 500 Vario with separate adjustable spray pressure for the upper and lower side.

For physical reasons the etching result from the upper side is different from the lower side. Adjusting the spray pressure for one side may compensate this phenomena. In contrast to etching machines from competitors the PCB in the DL 500 is firmly fixed throughout the whole process by upper and lower transport rollers. This makes it possible to switch off completely the upper nozzles without lifting the PCB by the spray pressure of the lower nozzles.

### Option 8: DL 500 triple phases power supply

You can order the DL 500 either with a single phases or triple phases power supply.

Triple phase power supply is recommended for permanent use.



### **Option 9: Filter unit**

On request you can equip your DL 500 with one or two 10" filter units to remove residues from the etching process. You can easily adjust the filter throughput via cock valve. On the picture you can see a filter unit together with an exit table.



# max.

# **TITAN 3500**

BUNGARD

### **ROTATION WHEEL ETCHER** FOR DOUBLE SIDED SHEETS

The Titan 3500 is a double-sided spray etcher for high precision applications.

In addition to the patented nozzle system, which ensures uniform wetting of the substrate, the substrate is rotated during the etching process to reliably prevent the formation of an etch shadow and uneven etching by e.g. the trace geometry. This enables structure resolutions down to  $40\mu$ m with a copper thickness of  $35\mu$ m.

As material PVC and PP are used, all metal parts that come into contact with the etching medium are made of titanium, e.g. the titanium heating. The side walls and tank bottom are made of 8 mm thick PVC.




This results in an extremely robust compact construction. The high-precision etching result is achieved by the uniform volume flow of the nozzle spray bar in conjunction with the rotating clamping wheel and the uniform liquid flow of the etching medium.

The special nozzles are internally designed in such a way that the full spray cone strikes the rotating etch material with a twist.

During the etching process, the clamping wheel is constantly rotated via a geared motor and transport rollers.

The titanium heating is controlled by a digital thermostat. The etchant pump is controlled by a digital timer with automatic reset and final acoustic signal. Setting range 0-599 seconds.

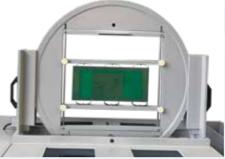



### **TITAN 3500**


Power supply:	230 V~, 50 Hz, ca. 1,8 kW
Dimension (LxDxH):	950 x 750 x 1100 mm
Working height:	1150 mm
Usable format:	max. 350 x 350 mm
Tank volume:	28
Etching pump:	Magnetic centrifugal pump
with approx	. 801/min throughput (gross)
Weight:	90 kg
Digital-timer for time	range: 0-599 sec.
Temperature range:	0 – 55 °C
Height cog valve (em	ptying): ca. 300 mm









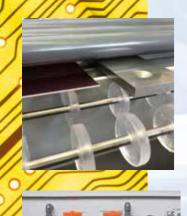



### CUSTOMIZED ETCHING SYSTEM FOR YOUR PCB LABORATORY.

The Sprint (3000/4500/6000) series is made for double sided PCBs with line resolution down to better than 0,1 mm. Machine is available as table top or floor standing version. With this range of products, complete production lines are possible covering developing, etching and rinsing including waste water treatment.

Outstanding feature is the transport unit, which is fully removable for cleaning purposes and may be extended or shortened almost arbitrarily, and thus allows custom changes or machine designs. Standard machine has a width of 300 mm (SPRINT 3000) but wider machines are available (450 mm=Sprint 4500 / 600 mm =Sprint 6000).

### **Technical highlights:**

- Small footprint, easy handling, control panel at the front
- Service friendliness: All nozzles with self-adjusting Bayonet Lock: no readjustment!
- Transport: the complete transportation unit can be easily taken out of the machine for cleaning and is based on a maintenance-free bevel gear system (titanium-PP) with horizontal gear shaft
- Transport speed infinetly variable from 0-2m/min
- Short etching time and high etching precision due to high end spray nozzles arranged in nozzle bar
- · Machine equipped with filter for etchant
- Titanium heater, controlled by digital thermostate with function control
- Integral closed loop rinse plus fresh water rinse, upon request also with motion dectector
- Clean and easy emptying of all tanks via cock valves
- Security features: cover switch and emergency stop

### Possible options:

- Working width: 450 mm / 600 mm for Sprint 4500/6000
- Sensor control for fresh water rinse (motion control)
- Additional suction hood, swiveling
- Upper / lower pressure adjustable via cog valve
- Additional rinsing sections possible
- Etching zone can be enlarged to 2x / 3x / 4x length
- High pressure pump for rinsing
- Titanium cooling coil, electrically controlled to reduce bath temperature in case of danger of exothermical reaction
- Run dry protection (double security for heater elements)
- Underframe with or without security tray
- Transmitting height up to 10mm (e.g. for pad printing clichees)
- Can be supplied with waste water treatment unit
- Oscillation module possible



# **AQUAPUR 1000**

### WASTE WATER TREATMENT SYSTEM

AquaPur (1000/3000/5000) cleans rinsing water from solids and heavy metals such as copper or iron of small to medium series of PCB production.

The ion exchangers of this system are suitable for alkaline and acidic rinse water from the etching process.

The use of a special mixed bed resin for anions and cations, which can be regenerated, avoids the use of other chemicals e.g. for pH adjustment and ensures easy operation.

The system operates in closed loop circulation and is directly connected to the respective rinsing zones of the etching machine.

- and the Flow meters.
- AquaPur.





Combination of Sprint 3000 and AquaPur 1000







Option: Additional suction hood






230 V~, 50 Hz, 1,5 kW Power supply: 1100 x 750 x 750 mm Overall size: (L x Wx H): Working width: 300 mm 210 x 300 mm Tank capacity: Tank capacity: 20 I (etchant), 15 I (close loop rinse) +-95 kg Weight: approx. 80 litre/min Water output: Spray pressure: +-1 bar Working temperature: 0 – 45 °C

**SPRINT 3000** 

00088008888008888000











Sprint 3000 + Middle section + Sprint 300

The spray pressure and the flow rate can be read and adjusted at the diaphragm valve

The contaminated rinse water of the machine flows into a storage tank integrated into the





### **AQUAPUR 1000**

Power supply: 230 V~, 50 Hz, approx. 1,5 kW 900 x 800 x 1500 mm Dimensions (L x W x H): Working Level: 90 mm approx. 250 I Tank capacity: lon exchange columns: 2 x 14 I mixed bed resin Pump pressure: approx. 1,8 bar Capacity: 2500 l/h (recommended: 20 l/h) 90 ka Weiaht

# IONEX A, B, KA, KB

### WASTE WATER TREATMENT SYSTEM

The name IONEX stands for ION-EXchanger, which is the very heart of this modern waste water treatment system. The lonex is a modern and compact plant to treat rinsing water of a PCB laboratory. We offer 4 basic variants, which differ in rinsing water throughput and ion capacity. Type A and B are equipped with a cotton pre-filter, two cation columns and a ph neutralization column. Type KA and KB have three ion exchange columns.

The cation columns color red, when loaded with ferric ions and blue/green, when loaded with copper ions. Loading of anion column can be tested by measuring the conductance of the cleaned water. Loaded columns can be sent to Bungard for regeneration or we support you to do the regeneration yourself.

The drain water quality from this system is in accordance to German directives, which are of the highest standards world wide!

UNGARD

### Features:

- For post-treatment of etching and galvanic rinsing water
- · Removal of solids and all heavy metals
- closed water cycle possible (K-versions)
- Decrease of chemical oxygen demand
- Integrated storage sump with capacity of 110 I (A/KA) or 220 I (B/KB) for collecting rinsing water
- Strong built-in hose pump
- Integrated cotton filter candle 10  $\mu$ m (active carbon filter with K-versions)
- · Significant change of color when loaded with metals
- Lower and upper sump level control switch
- Easy handling and operation
- Regeneration of ion exchange resins by supplier or by user at little cost
- · IONEX A and B perform additionally PH neutralization and discharge to the drain





As an option the IONEX can be equipped with a conductivity meter (IONEX KA/KB) or a ph-meter (IONEX A/B). This way you have the quality of the treated rinse water always under control.



**IONEX** scheme KA-KB





Of course the machines of the IONEX family can be adapted according to your needs. The IONEX XXL e.g. cleans 1500 l of rinsing water. The IONEX AU filters gold ions out of rinsing water from a nickel-gold-processing machine. These gold ions can be regenerated and returned to the gold bath.





Latest and updated product specification is published under www.bungard.com (C) 202



### IONEX A / KA

Power supply:	230 V, 50 Hz, 50 W
Weight:	30 kg
Tank capacity:	1101
Cleaning capacity:	10 I / h
Dimensions (LxWxH):	700 x 430 x 1300 mm

### **IONEX B / KB**


Power supply:	230 V, 50 Hz, 100 W
Weight:	60 kg
Tank capacity:	220
Cleaning capacity:	20 I / h
Dimensions (LxWxH):	900 x 600 x 1500 mm



### Closed loop rinsing water:

IONEX KA and KB filter next to the metalic cations also the anionic halogens from the rinsing water, so you receive demineralized water. The demineralized water is collected and pumped back to the etching or throughhole-plating machine.



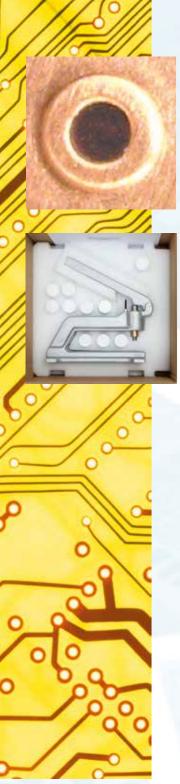

### ACCESSORIES FOR YOUR PCB - LAB

### Processing Dishes for PCB lab.

Rigid trays suitable for deloping, etching, stripping, immersion tinning.

The trays, which have a spout to facilitate emptying, are available in three sizes.

Insize: 350 x 450 x 75 mm 250 x 320 x 60 mm 210 x 260 x 50 mm

Stripper for positive and negative photoresists



### Green Coat solder paint



Developer for positive presensitized boards



Developer for negative presensitized boards





Stain remover RX 3





Sodium persulfate



# **FAVORIT**

### THROUGH-HOLE-PLATING

Hand-operated machine, especially for mechanical through-hole-plating purposes. Professional through-hole-platings by individual tools for each rivet diameter. Optimal contacts, even without soldering. Favorit offers high quality results at a low cost level.



### Special features:

- Adjustable depth limiter
- Maximum board size: 400 mm

### Extend of delivery:

- The offered system includes complete press + tools
- Inclusive 1 x 1000 rivets
- Inclusive 1 set of tools
- Various tools and rivets are available
- Please specify the inner diameter you require
- Different tools have to be used for different diameters





### FAVORIT

Dimensions (LxWxH): approx. 95 x 300 x 210 mm Working depth: 200 mm Weight: approx. 4 kg

Rivet with inner diameter/mm: 0.4 0.6 0.8 1.0 1.2 1.5 Required drill diameter/mm: 0.6 0.8 1.0 1.5 1.7 2.0



Page 28









# VARIODRILL

### PCB DRILLING SYSTEM

VARIODRILL is a PCB drilling machine for prototypes and small batch production.

The demand for operating comfort and high quality has led to an untraditional design which meets the necessary requirements for an ergonomic correct working position.

### Features:

- comfortable working position, drill table can be tilted up to 30 °
- magnifyer optics directly over the drill hole (parallaxes free)

- Illuminated work area
- Motor controlled, adjustable stroke speed, spindle underneath the table
- Infinitely adjustable 10.000 .... 30.000 RPM
- AC Motor, 100 Watts / 230 Volt
- Including foot switch for easy operating
- Booth hands are free for positioning the PCB
- Complete system with integral dust extraction
- Including external vacuum cleaner
- Throat depth: 115 mm, max. board size 230 mm x endless
- Chuck: 1/8" (3.2mm)

VARIODRILL CA

• Drill size 0.6 to 3.2 mm

# **DRILLS AND** ROUTERS

### SOLID CARBIDE

High quality, precision ground solid carbide drill and routing bits with 3.175 mm (1/8") shaft.

All tools have 7.5 mm wide collets with a distance of 21 mm from the tip to the upper side of the collet.

The tool rings show the diameter or are colour coded. Tools come in re-usable plastic boxes.

Within one class of price, tools with different diameters can be mixed to give one unit of 10pc.

Contour Routers - SC/FT Type

### Special tools for isolation milling < 0,6mm

SC/FT Router cylindrical: 0.3, 0.4 und 0.5 mm

**Bungard Special isolation milling routers** 

0.1 and 0.2 mm

These routers are cylindrical only in the last millimetre. This way there is a low risk of breaking the router.

### or:

### V-Cut Routers G30°N Type


For isolation routing and fine engraving, two flutes,  $30^{\circ}$  tip angle. For Channels of 0.1 - 0.3 mm width (depending on cutting depth).

### Contour Routers G60°N Type

For isolation routing with or for engraving, two flutes,  $60^{\circ}$  tip angle. For Channels of 0.2 - 0.5 mm width (depending on cutting depth).

Chuck:		3.175 mm
Dimensions (LxV	VxH):	340 x 240 x 175 mm
Weight:		approx. 7 kg
Power supply:	220 V~,	, 50Hz, approx. 0,6 kW
		+ vacuum cleaner

VARIODRILL

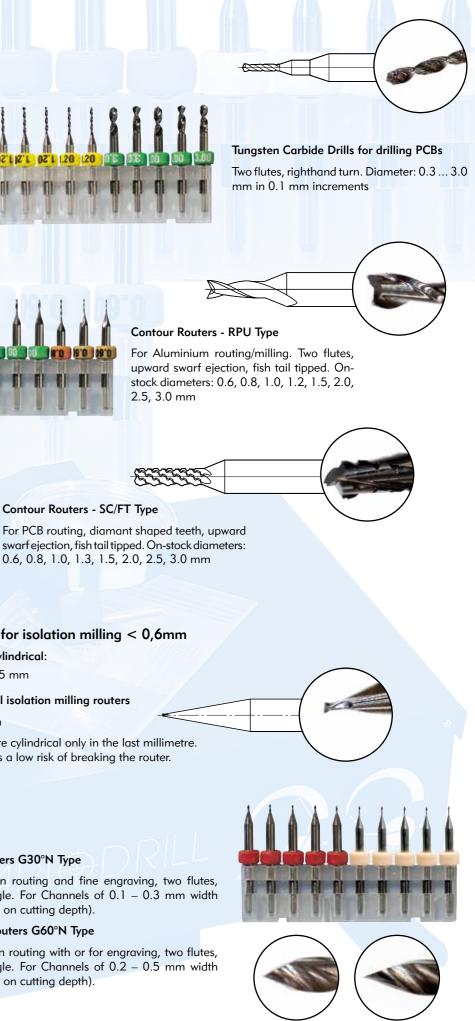



u

# **CHEMICAL ETCHING OR ISOLATION MILLING**


Chemical etching or isolation milling that is an often asked question. Find detailed report here: www.isolationmilling.com


In general: Chemical etching needs a film artwork or a laser direct imaging, but, the etching itself is extremly cheap and thus standard in world wide printed circuit board production.

Isolation milling does not need film artwork, but, generates high tooling costs and some application problems. That is why isolation milling is more for first and single prototypes.

Construction: 0,035 mm copper 0,2 mm inner layers plus 0,1 mm separation prepreg


# Copper coated alumimium PCBs as normally used in LED applications (Cotherm)

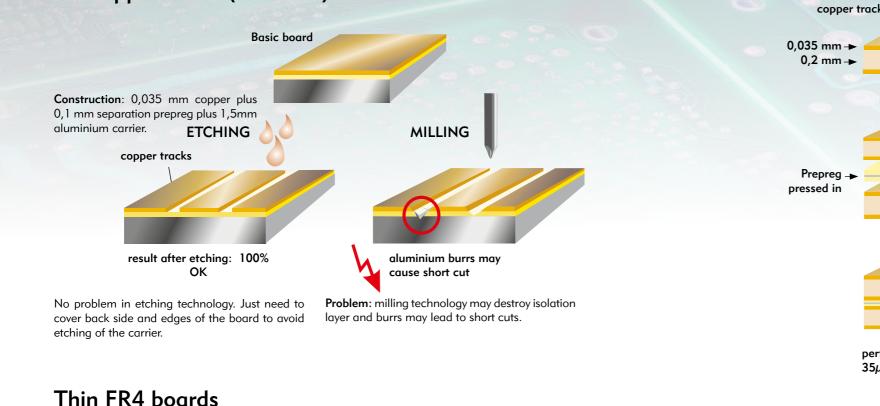

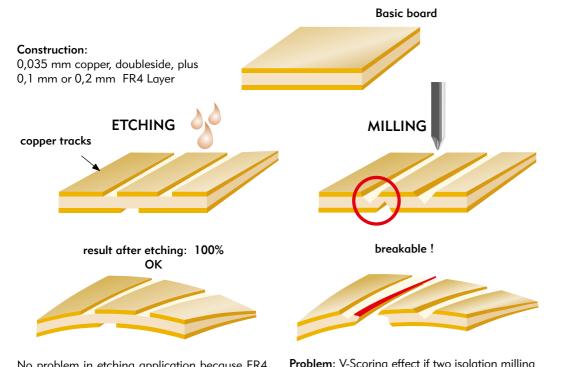

No problem in etching application because FR4 carrier is not effected by etchant.

Problem: V-Scoring effect if two isolation milling channels end up on top of each other.

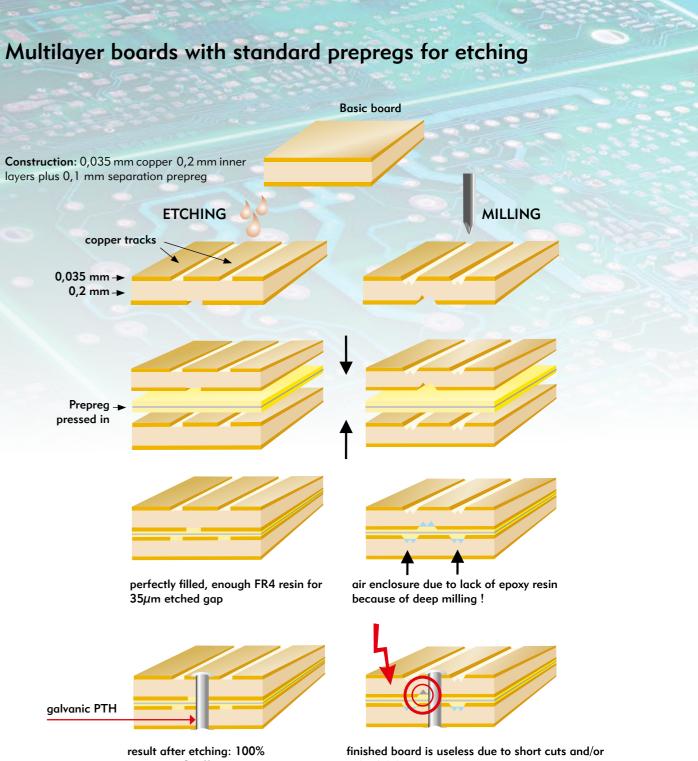

**OK** !!

State of art for multilayers should be the etching technology. To avoid layout film production, etching can be combined with Laser Direct Imaging (LDI), to compare advantages of both technologies !

risk of delamination


Problem with isolation milling is, that -worldwide - prepregs are made for etching application and in order to fill the gap of normal copper thickness of  $35\mu$ m. Since isolation milling channels are deeper, there is a high risk in production. Air inclusions not filled by resin of the prepreg may end up in short cuts (if touched by a plating through hole) or lead to delamination during e.g. reflow soldering process, due to the expansion of the air bubble.

# BUNGARD CCD SERIES CNC MACHINES







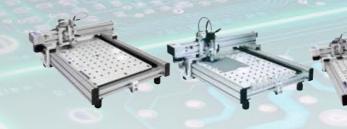

	CCD/2-ECO	CCD/2/MTC	CCD/2/ATC	CCD/2/ATC PRECISION	CCD/MTC	CCD/ATC	CCD/M
Weight kg Dimensions mm Work area mm	30 kg 700x550x300 270x325x38	30 kg 700x550x300 270x325x38	30 kg 700x550x300 270x325x38	30 kg 700x550x300 270x325x38	35 kg 700x800x300 325x495x38	35 kg 700x800x300 325x495x38	49 k 950x950 500x60
Tool change semiautomatic/manual/ 99 tools	yes	yes	yes	yes	yes	yes	yes
fully automatic with length control	not upgradeable not upgradeable	not upgradeable not upgradeable	yes,16 tools yes	yes,16 tools yes	upgradeable upgradeable	yes,16 tools yes	upgrade upgrade
Milling and drilling single-and double-sided PCBs	***	***	☆☆☆	x x x	***	***	**
Milling/drilling RF- & microwave substrates	**	**	☆☆	**	**	**	\$
Milling/drilling multilayers with up to 16 layers *	***	***	***	***	***	***	**
Contour routing of PCBs	***	***	***	***	***	***	**
Milling flexible, rigid-flex PCBs **	***	***	***	$\Delta \Delta \Delta$	***	***	**
Engraving front panels/labels	*	☆	☆☆	**	***	**	**
Wave solder pallets and Housing production	☆	$\stackrel{\wedge}{\rightarrow}$	**	**	***	**	**
Milling SMT soldering paste stencils and solder frames	$\bigstar$	☆	$\Delta \Delta$	**	***	**	**
UV-laser-exposure	**	**	**	**	**	**	\$
Panel cutting, Reworking PCBs	***	***	☆☆☆	***	***	***	**
Test adapter drilling	☆	☆	*	\$	***	***	**
Cooling	☆	${\leftrightarrow}$	**	$\Delta \Delta$	***	**	**

\*) we generally recommend to etch at least the inner layers of a mulilayer pcb \*\*) for flexible materials vacuum fixation is a nice option

(1)

U.

6

☆ well-suited



### MTC/XL

9 kg 950x300 600x38

yes

adeable adeable

☆☆

7

☆☆

☆☆

☆☆

☆☆

☆☆

☆☆

1

☆☆

☆☆

☆☆

### CCD/ATC/XL

49 kg 950x950x300 500x600x38

### yes

yes, 25 tools yes

☆☆☆

☆☆

☆☆☆

☆☆☆

☆☆☆

☆☆

 $& & & & & \\ & & & & & & & \\ & & & & & & \\ & & & & & & & \\ & & & & & & & \\ & & & & & & & \\ & & & & & & & \\ & & & & & & & \\ & &$ 

☆☆☆

☆☆

☆☆

☆☆

☆☆

 $\bigstar$  very suitable  $\bigstar$   $\bigstar$  ideal

### **CCD PREMIUM**

80 kg 700x850x600 400x500x60

yes

yes, 30 tools yes

☆☆☆

☆☆☆

☆☆☆

☆☆☆

☆☆☆

☆☆☆

☆☆☆

☆☆☆


☆☆☆

☆☆☆

☆☆☆

☆☆☆



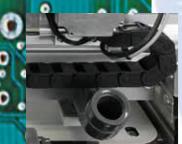

000

0

# **BUNGARD CCD/2-ECO**

**CNC MACHINE** 

The Bungard CCD/2-Eco completes the Bungard CNC segment for the low price level. The machine is especially interesting for beginners with a low budget, because it has on the one hand an unbeatable price, but on the other hand offers the same mechanic quality and precision of all other Bungard CNC machines.

Unlike all other CCDs, this machine is equipped with a low-cost eco-spindle which allows speeds from 5000 up to 35000 U / min. For normal everyday work such as isolation milling and contour milling of printed circuit boards, this spindle is highly sufficient. For aluminum and non-ferrous metals however not. Of course the machine can be upgraded at any time thereafter with a high-speed spindle.

The CCD/2-Eco is a high quality Computer Controlled Drilling machine with semi-automatic tool change. It allows direct processing of Excellon / Sieb & Meyer drill data or HP-/GL data for the production of printed circuit boards (drilling, milling, isolation routing) and milling/engraving of plastics.

In addition to the spindle the Bungard CCD/2-Eco can be upgraded with a dispensing device for solder paste or glue, a laser exposure head for exposing photoresists and a camera for calibration and inspection tasks.

• Mechanic unit + control unit + complete cabeling

SCOPE OF DELIVERY:

- Superb and sturdy high frequency spindle with eddy current brake and load control
- Integrated mechanical milling depth limiter and pressure foot
- Driver software RoutePro3000 (Windows 7<sup>™</sup>-Windows 10<sup>™</sup> - 64bit) for drilling and milling
- Powerful, adjustable (500-2000 W) + start adapter for vacuum cleaner (vacuum cleaner not included)
- Manual, USB/serial adapter, Set of Allen Keys

**best choice for** prototyping of printed ciruit boards and isolation milling



Vacuum table, protection hood or protection rack, converter software IsoCam, fiducial recognition and calibration with camera, laser exposure of photo resists, aluminium work table, routers engine adapter for plastic milling and many more.

**OPTIONS:** 

Picture shows power supply of CCD/2/ECO

### Weight: Dimensions (LxWxH): Work area: Tool change: Power supply:

Range of RPM: Traveling speed: Software resolution: Mechanical resolution:

Tool diameter:

Position accuracy: Maximum position speed per axis: Maximum working speed per axis:

Drill speed: Required accessories: Board fixation:



Videoclip of **Bungard CCD** 

Upgrade to Kavo high-frequency spindle (this requires: Spindle holder 33mm, spindle 4010, inverter in Al-housing for mounting on the Y-carriage, 8-wire Chainflex control wire).





Picture shows rollrack

### **BUNGARD CCD/2-ECO MTC**

30 kg	
700 x 550 x 300 mm	
270 x 325 x 38 mm	
semiautomatic 99 tools	
110-240 V, 50-60 Hz + vacuum cleaner (1500W) (not included ir	n delivery)
5.000 - 35.000	
1 – 9000 mm/min	
0,0001mm (0,1 μm)	
step resolution: Software selectable: 1 mil, 1/8mil, optional: 1/16mil + 1/32mil	½mil, ¼mil,
0.1mm – 3,175 mm (recommended, bigg diameter possible) 20 ppm (0.002%) over the entire work sp	-
9000/mm/min (=150 mm/s)	
9000/mm/min (=150 mm/s), individual s per-tool basis, independent from position	0
5/s (= 9.000 holes/h= 150 holes/min)	
Computer	
span fixing, clamp fixing, reference pin sy stack processing possible	stem,

Option: vacuum fixation



# **BUNGARD CCD/2 MTC**

### **CNC MACHINE**

The Bungard CCD/2/MTC is a high quality Computer Controlled Drilling machine with semi-automatic tool change. In contrast to the CCD/MTC the CCD/2 has a half sized work area (325 x 270 compared to 325 x 495mm) and an integrated control unit underneath the table.

Compared to the ATC models, the software interrupts the operation during the tool change and the new tool is changed manually (turning the knob changes by a quarter turn; motors remain empowered and hold the position).

The CCD/2 has the same robustness and precision as all the other CCD models. It is ideal as an entry-level model for isolation milling. If you want to operate the CCD/2 with cooling, you need to protect the control unit from the cooling. Please contact us beforehand.

In contrast to all other CCD models, the machine zero point is at the front left. The X axis is the traverse over the table, whereas the Y-axis is located on table level. The CCD/2 can not be converted to automatic tool change. If you possibly want to upgrade at a later time, please contact us before purchase. If necessary we can create a special version for you.

• Mechanic unit + control unit + complete cabeling

SCOPE OF DELIVERY:

- Superb and sturdy high frequency spindle with eddy current brake and load control
- Integrated mechanical milling depth limiter and pressure foot
- Driver software RoutePro3000 (Windows 7<sup>™</sup>-Windows 10<sup>TM</sup>-64bit) for drilling and milling
- Powerful, adjustable (500-2000 W) vacuum cleaner + Start adapter for vacuum cleaner
- Manual, USB/serial adapter, Set of Allen Keys

**best choice for** prototyping of printed ciruit boards and isolation milling



Picture of optional camera and LDI

### Weight: Dimensions (LxWxH): Work area: Tool change: Power supply: Range of RPM: Traveling speed: Software resolution: Mechanical resolution:

pressor, etc.

Explains:

Tool diameter:

Position accuracy: Maximum position speed per axis: Maximum working speed per axis:

Drill speed: Required accessories: Board fixation:



Videoclip of **Bungard CCD** 



BUNGARI	D CCD/2 MTC	
	30 kg	
	700 x 550 x 300 mm	
	270 x 325 x 38 mm	
	semiautomatic 99 tools	
	110-240 V, 50-60 Hz + vacuum cleaner (1500W)	
	5.000 - 63.000	
	1 – 9000 mm/min	
	0,0001mm (0,1 μm)	
	step resolution: Software selectable: 1 mil, $\frac{1}{2}$ mil, $\frac{1}{4}$ mil, 1/8 mil, optional: 1/16 mil + 1/32 mil	
	0.1mm – 3,175 mm (recommended, bigger tool diameter possible) 20 ppm (0.002%) over the entire work space:	
s:	9000/mm/min (=150 mm/s)	
5:	9000/mm/min (=150 mm/s), individual setting on a per-tool basis, independent from position speed	
	5/s (= 18.000 holes/h= 300 holes/min)	
	Computer	
	span fixing, clamp fixing, reference pin system, stack processing possible Option: vacuum fixation	

# 00000000 0.0 00 0

# **BUNGARD CCD/2 ATC**

### **CNC MACHINE**

The Bungard CCD/2/ATC is a high quality Computer Controlled Drilling machine with automatic tool change. The CCD/2/ATC differs from the CCD/ ATC by a half sized working area (325 x 270mm).

The CCD/2/ATC is ideal for users, who do not have enough space to run an ATC machine ...

- SCOPE OF DELIVERY:
- Mechanic unit + control unit + complete cabeling
- Superb and sturdy high frequency spindle with eddy current brake and load control
- Integrated mechanical milling depth limiter and pressure foot
- Driver software RoutePro 3000 (Windows 7<sup>™</sup>-Windows 10<sup>™</sup>-64bit) for drilling and milling
- Powerful, adjustable (500-2000 W) vacuum cleaner + start adapter for vacuum cleaner

- Manual, USB/serial adapter, Set of Allen Keys
- ATC: Air hose

Available options:

Protective hood, CAM / Isolation software, monitor + camera, cooling device, compressor, etc.

### Explains:

MTC = Manual Tool Change ATC = Automatic Tool Change

**best choice for** prototyping of printed ciruit boards and isolation milling small scale production



Videoclip of **Bungard CCD**  Weight:

Work area: Tool change:

Power supply: Range of RPM:

Traveling speed:

Tool diameter:

Drill speed:

Board fixation:

Position accuracy:

Required accessories:

Maximum position speed per axis:

Maximum working speed per axis:

Software resolution: Mechanical resolution:

Dimensions (LxWxH):



### **BUNGARD CCD/2 ATC**

### 30 kg

700 x 550 x 300 mm 270 x 325 x 38 mm

16 automatic / semiautomatic 99 tools

110-240 V, 50-60 Hz + vacuum cleaner (1500W)

5.000 - 63.000

1 – 9000 mm/min

0,00001mm (0,01µm)

step resolution: Software selectable: 1 mil, 1/2 mil, 1/4 mil, 1/8 mil, optional: 1/16mil + 1/32mil

0.1mm – 3,175 mm (recommended, bigger tool diameter possible) 20 ppm (0.002%) over the entire work space:

9000/mm/min (=150 mm/s)

9000/mm/min (=150 mm/s), individual setting on a per-tool basis, independent from position speed

5/s (= 18.000 holes/h= 300 holes/min)

### Computer

span fixing, clamp fixing, reference pin system, stack processing possible Option: vacuum fixation

# **BUNGARD CCD/2 ATC** PRECISION

### **CNC MACHINE**

0000000

0...0

00

0

The Bungard CCD/2/ATC Precision is a high quality Computer Controlled Drilling machine with automatic tool change. The CCD/2/ATC Precision differs from the CCD/2/ ATCby higher step resolution at almost same drive speed as well as by two additional software packages under ROUTEPRO 3000:

Calibrate 3000 (incl. camera, not shown on the picture here) and PLUS 3000

The CCD/2/ATC Precision is ideal for users, who do not have enough space to run an CCD/Premium machine.

### SCOPE OF DELIVERY:

- Mechanic unit + control unit + complete cabeling
- Superb and sturdy high frequency spindle with eddy current brake and load control
- Integrated mechanical milling depth limiter and pressure foot
- Driver software RoutePro 3000 (Windows 7<sup>™</sup>-Windows 10<sup>™</sup>-64bit) for drilling and milling
- Powerful, adjustable (500-2000 W) vacuum cleaner + start adapter for vacuum cleaner

- Manual, USB/serial adapter, Set of Allen Keys
- ATC: Air hose

### Available options:

Protective hood, CAM / Isolation software, monitor + camera, cooling device, compressor, etc.

### Explains:

MTC = Manual Tool Change ATC = Automatic Tool Change

**best choice for** prototyping of printed ciruit boards and isolation milling small scale production



Weight:

Work area: Tool change: Power supply: Range of RPM: Traveling speed: Software resolution: Mechanical resolution:

Tool diameter:

Drill speed:

Position accuracy:

Required accessories: **Board fixation:** 

Maximum position speed per axis: Maximum working speed per axis:

Dimensions (LxWxH):



### **BUNGARD CCD/2 ATC PRECISION**

	30 kg
	700 x 550 x 300 mm
	270 x 325 x 38 mm
	16 automatic / semiautomatic 99 tools
	110-240 V, 50-60 Hz + vacuum cleaner (1500W)
	5.000 - 63.000
	1 – 7000 mm/min
	0,00001mm (0,01µm)
	step resolution: $0,79\mu m = 1/32$ mil
	0.1mm – 3,175 mm (recommended, bigger tool
	diameter possible) 20 ppm (0.002%) over the entire work space:
:	7000/mm/min (=150 mm/s)
:	7000/mm/min (=150 mm/s), individual setting on a per-tool basis, independent from position speed
	5/s (= 18.000 holes/h= 300 holes/min)
	Computer
	span fixing, clamp fixing, reference pin system, stack processing possible Option: vacuum fixation

# **BUNGARD CCD MTC**

### CNC MACHINE

The Bungard CCD/MTC is a high quality Computer Controlled Drilling and milling machine with semi-automatic tool change (MTC = manual tool change).

The CCD/MTC differs from the CCD/2 by a larger working area (325x495mm in contrast to 270x325mm) and by a separate controller.

Compared to the ATC models, the software interrupts the operation during the tool change and the new tool is changed manually (turning the knob changes by a quarter turn; motors remaine empowered and hold the position).

With the sturdy spindle and the good fixation of the tool in the chuck the Bungard CCD / MTC is perfectly fitted for routing or engraving plastics, aluminium and other metals. 19 inch rack boards can also be processed.

### SCOPE OF DELIVERY:

- Mechanic unit + control unit + complete cabeling
- Superb and sturdy high frequency spindle with eddy current brake and load control
- Integrated mechanical milling depth limiter and pressure foot
- Driver software RoutePro 3000 (Windows 7<sup>™</sup>-Windows 10<sup>™</sup>-64bit) for drilling and milling
- Powerful, adjustable (500-2000 W) vacuum cleaner + start adapter for vacuum cleaner

**best choice for** printed circuit boards and frontpanel production

• manual, USB/serial adapter, Set of Allen Keys

### Available options:

Protective hood, CAM / Isolation software, monitor + camera, cooling device, compressor, etc.

### Explains:

MTC = Manual Tool Change ATC = Automatic Tool Change



### Weight: Dimensions (LxWxH): Work area: Tool change: Power supply: Range of RPM:

Traveling speed: Software resolution: Mechanical resolution:


Tool diameter:

Position accuracy: Maximum position speed per axis: Maximum working speed per axis:

Drill speed: Required accessories: Board fixation:



Videoclip of **Bungard CCD** 

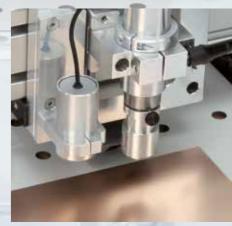

Option: Camera

### **BUNGARD CCD MTC**

35 kg
700 x 800 x 300 mm
325 x 495 x 38 mm
semiautomatic 99 tools
110-240 V, 50-60 Hz + vacuum cleaner (1500W)
5.000 - 63.000
1 – 9000 mm/min
0,00001mm (0,01µm)
step resolution: Software selectable: 1 mil, $\frac{1}{2}$ mil, $\frac{1}{4}$ mil, 1/8mil, optional: 1/16mil + 1/32mil
0.1 mm – 3,175 mm (recommended, bigger tool
diameter possible) 20 ppm (0.002%) over the entire work space:
9000/mm/min (=150 mm/s)
9000/mm/min (=150 mm/s), individual setting on a per-tool basis, independent from position speed
5/s (= 18.000 holes/h= 300 holes/min)
Computer
span fixing, clamp fixing, reference pin system, stack processing possible Option: vacuum fixation

### 00000000 0.0 00 0

0

# **BUNGARD CCD** ATC

### **CNC MACHINE**

The Bungard CCD/ATC is a high quality Computer Controlled Drilling machine with Automatic Tool Change (ATC).

The ATC as well as all other CCDs allows directly processing of Excellon / Sieb&Meyer drill data or HP/GL route data for producing pcbs (drilling, cutout-routing, isolation milling) or routing/engraving plastics, aluminium and other metals.

The CCD/ATC differs from the CCD/MTC by the automatic 16-slot tool changer. The work space is the same. Compared with the CCD/2 the ATC has a larger work space (325x495mm in contrast to 270x325mm with the CCD/2) and a separate control unit.

The ATC is ideal for big and more complex PCBs with many different drill sizes. 19 inch rack boards can also be processed.

### SCOPE OF DELIVERY:

- Mechanic unit + control unit + complete cabeling
- Superb and sturdy high frequency spindle with eddy current brake and load control
- Integrated mechanical milling depth limiter and pressure foot
- Driver software RoutePro 3000 (Windows 7<sup>™</sup>-Windows 10<sup>™</sup>-64bit) for drilling and milling
- Powerful, adjustable (500-2000 W) vacuum cleaner + start adapter for vacuum cleaner
- Manual, USB/serial adapter, Set of Allen Keys
- ATC: Air hose

best choice for PCB production in large quantities

### Available options:

Protective hood, CAM / Isolation software, monitor + camera, cooling device, compressor, etc.

### Explains:

MTC = Manual Tool Change ATC = Automatic Tool Change



### Weight: Dimensions (LxWxH): Work area: Tool change: Power supply: Range of RPM: Traveling speed: Software resolution: Mechanical resolution:

Tool diameter:

Position accuracy: Maximum position speed per axis: Maximum working speed per axis:

Drill speed: Required accessories: Board fixation:



Videoclip of **Bungard** CCD







### **BUNGARD CCD ATC**

### 35 kg

700 x 800 x 300 mm

325 x 495 x 38 mm

16 automatic / semiautomatic 99 tools

110-240 V, 50-60 Hz + vacuum cleaner (1500W) 5.000 - 63.000

1 – 9000 mm/min

0,00001mm (0,01µm)

step resolution: Software selectable: 1 mil, 1/2 mil, 1/4 mil, 1/8mil, optional: 1/16mil + 1/32mil

0.1 mm – 3,175 mm (recommended, bigger tool

diameter possible) 20 ppm (0.002%) over the entire work space:

9000/mm/min (=150 mm/s)

9000/mm/min (=150 mm/s), individual setting on a per-tool basis, independent from position speed

5/s (= 18.000 holes/h= 300 holes/min)

### Computer

span fixing, clamp fixing, reference pin system, stack processing possible Option: vacuum fixation





.

# **BUNGARD CCD XL MTC**

# CNC MACHINE

The Bungard CCD/MTC is a high quality Computer Controlled Drilling and milling machine with semi-automatic tool change (MTC = manual tool change).

The CCD/MTC XL differs from the CCD/MTC by a larger working area (500x600mm in contrast to 325x495mm).

Compared to the ATC models, the software interrupts the operation during the tool change and the new tool is changed manually (turning the knob changes by a guarter turn; motors remaine empowered and hold the position).

With the sturdy spindle and the good fixation of the tool in the chuck the Bungard CCD/MTC XL is perfectly fitted for routing or engraving plastics, aluminium and other metals. 19 inch rack boards can also be processed.

> **best choice for** printed circuit boards in large quantities and frontpanel production

SCOPE OF DELIVERY:

complete cabeling

pressure foot

Mechanic unit + control unit +

eddy current brake and load control

• Superb and sturdy high frequency spindle with

• Integrated mechanical milling depth limiter and

Driver software RoutePro 3000 (Windows 7<sup>™</sup>-

• Powerful, adjustable (500-2000 W) vacuum

Windows 10<sup>™</sup>-64bit) for drilling and milling

cleaner + start adapter for vacuum cleaner

• Manual, USB/serial adapter, Set of Allen Keys

### Available options:

Protective hood, CAM / Isolation software, monitor + camera, cooling device, compressor, etc.

### Explains:

MTC = Manual Tool Change ATC = Automatic Tool Change

### Weight: Dimensions (LxWxH): Work area: Tool change: Power supply: Range of RPM: Traveling speed: Software resolution: Mechanical resolution:

Tool diameter:

Position accuracy: Maximum position speed per axis: Maximum working speed per axis:

Drill speed: Required accessories: Board fixation:

Videoclip of **Bungard** CCD







### **BUNGARD CCD XL MTC**

### 49 kg

950 x 950 x 300 mm

500 x 600 x 38 mm

semiautomatic 99 tools

110-240 V, 50-60 Hz + vacuum cleaner (1500W)

5.000 - 63.000

1 – 9000 mm/min

0,00001 mm ( $0,01\mu$ m)

step resolution: Software selectable: 1 mil, 1/2 mil, 1/4 mil, 1/8mil, optional: 1/16mil + 1/32mil

0.1 mm – 3,175 mm (recommended, bigger tool diameter possible)

20 ppm (0.002%) over the entire work space:

9000/mm/min (=150 mm/s)

9000/mm/min (=150 mm/s), individual setting on a per-tool basis, independent from position speed 5/s (= 18.000 holes/h= 300 holes/min)

Computer

span fixing, clamp fixing, reference pin system, stack processing possible Option: vacuum fixation



# **BUNGARD CCD XL ATC**

### CNC MACHINE

The Bungard CCD/ATC/XL is a high quality Computer Controlled Drilling machine with Automatic Tool Change (ATC).

The ATC/XL as well as all other CCDs allows directly processing of Excellon / Sieb&Meyer drill data or HP/GL route data for producing PCBs (drilling, cut-out-routing, isolation milling) or routing/ engraving plastics, aluminium and other metals.

The CCD/ATC/XL differs from the CCD/MTC/XL by the automatic 25-slot tool changer. The work space is the same.


Compared with the CCD/ATC the XL has a larger work space (500x600mm in contrast to 495x325mm with the CCD/ATC) and the number of tool slots (25 instead of 16).

The ATC is ideal for very big and complex PCBs with many different drill sizes and for special applications.

 Mechanic unit + control unit + complete cabeling

SCOPE OF DELIVERY:

- Superb and sturdy high frequency spindle with eddy current brake and load control
- Integrated mechanical milling depth limiter and pressure foot
- Driver software RoutePro 3000 (Windows 7<sup>™</sup>-Windows 10<sup>TM</sup>-64bit) for drilling and milling
- Powerful, adjustable (500.-2000 W) vacuum cleaner + start adapter for vacuum cleaner
- Manual, USB/serial adapter, Set of Allen Keys
- ATC: Air hose

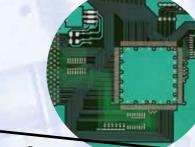

best choice for PCB production in large quantities

۲

### Available options:

Protective hood, CAM / Isolation software, monitor + camera, cooling device, compressor, etc.

Explains:

MTC = Manual Tool Change ATC = Automatic Tool Change



Videoclip of **Bungard** CCD Weight:

Work area:

Tool change:

Power supply: Range of RPM:

Traveling speed:

Tool diameter:

Drill speed:

Board fixation:

Position accuracy:

Required accessories:

Maximum position speed per axis:

Maximum working speed per axis:

Software resolution: Mechanical resolution:

Dimensions (LxWxH):




### **BUNGARD CCD XL ATC**

### 49 kg 950 x 950 x 300 mm 500 x 600 x 38 mm 25 automatic / semiautomatic 99 tools 110-240 V, 50-60 Hz + vacuum cleaner (1500W) 5.000 - 63.000 1 – 9000 mm/min 0,00001 mm ( $0,01\mu$ m) step resolution: Software selectable: 1 mil, 1/2 mil, 1/4 mil, 1/8mil, optional: 1/16mil + 1/32mil 0.1 mm – 3,175 mm (recommended, bigger tool diameter possible) 20 ppm (0.002%) over the entire work space: 9000/mm/min (=150 mm/s) 9000/mm/min (=150 mm/s), individual setting on a per-tool basis, independent from position speed 5/s (= 18.000 holes/h= 300 holes/min) Computer span fixing, clamp fixing, reference pin system, stack processing possible Option: vacuum fixation





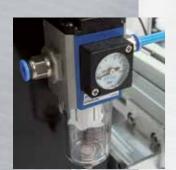



### **CNC PREMIUM MACHINE**

An international trendsetter on the world market for printed circuit board production is the Bungard CCD PREMIUM.

It combines all available highlights, required in a modern PCB lab, to a fully equipped CNC center.

### Details:

- Highest possible speed of 22m/minute/standard 7m/min
- Extremly high step resolution of 0,79 μm.
- 32 Bit chip technology for extremly quick communication under Windows 10<sup>™</sup> (or higher)
- Direct USB Port for easy installation
- High precision aluminium table, double sided overmilled, for about zero height tolerance
- Low maintenance costs due to linear belt drive in x- and y- direction

### Standard features:

- Integral full aluminum table for max possible stiffness
- 100.000 1/min spindle for smallest tool diameters • 300 W spindle
- Stepper motor torque adjustable via software
- 30 tool boxes for automatic tool change
- Tool length measurement and calibration incl. tool break control
- Integral pressure foot and depth limiter system
- Dust extraction with autostart function via software
- Rollrack with transparent doors with security switches

### Standard software supplied with the system:

- Software resolution  $0,1\mu m$
- · LOG files for perfect and automated online support.
- ROUTEPRO 3000 inclusive all modules:
- Plus 3000
- LaserPro 3000
- DispPro 3000
- Dokument 3000
- Calibrate 3000
- Inspect 3000

### Technical details/requirements:

90-250 V AC /47-63 Hz or Power supply: 124-370V DC (without options and dust extraction) Compressed air: 6 bar, +- 40 liter/minute Dimensionen machine: +- 800 x 950 x 600 mm Board size: 400 x 500 mm (Z-max: 64 mm) Weight machine: +- 80 kg Dimensionen rack: +- 900 x 1100 x 1600 mm Weight rack: +- 100 kg

### Available options:

- Laser head for LDI
- Dispenser
- Super silent compressor
- Vacuum table
- Note: Computer does not belong to scope of delivery.

For latest details scan QR-Code or look at BUNGARD website:



www.bungard.com Bungard CCD Premium









# **CCD ACCESSORIES**

### HARDWARE

The CCD is extensible through a variety of options, such as:

Protective hood, CAM/Isolation software, monitor + camera, cooling device, compressor, etc.

### SOFTWARE

Bungard standard software RoutePro3000 can be expanded with additional software modules, such as::

LaserPro 3000, DispPro 3000, Calibrate 3000, Inspect 3000, Document 3000, Plus 3000, API 3000 and QR-Code 3000



On request the CCD is deli-

vered with a vacuum table.

mmmmmm

BUN



For dust and noise protection we offer soundproofing hoods and racks.

> Pressure foot for drilling and routing.







Depth limiter.



0 

### Starter Kit for Bungard CCD

To work directly with your Bungard CCD, some accessories are required. For our new customers we arranged a starter kit according to our experience.

Page 54


Latest and updated product specification is published under www.bungard.com (C) 2024/2025 Bungard Elektronik



### Optional enhanced dust extraction system (instead of standard nozzle) offers


- higher efficiency
- lower noise
- more effective travel height






Exchanging the high frequency spindle with a pen plot adapter changes the CCD into an A3 Pen plotter.



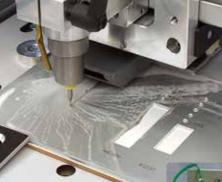

With few steps you can equip the CCD with a coolant supply.



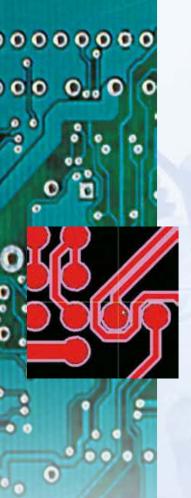



# **ROUTEPRO 3000**

TOP EQUIPMENT: SERIES OR UPGRADE THE CNC SOFTWARE-PLATFORM



### Designed as software package for all BUNGARD CCD CNC systems (later than 2006),


RoutePro 3000 integrates all standard functionality of previous Bungard software platforms such as:

- Drilling and routing of circuit boards
- Isolation milling and engraving
- Routing and engraving of front panels and housings
- Production of SMD templates

in a free of charge basic tool. This basic functionality may be upgraded at any time to various other applications by these interesting

### **MODULES:**

- Plus 3000 for up to 32 layers at a time
- LaserPro 3000 for laser direct imaging of photoresists
- DispPro 3000 for line and dot dispensing and filling
- Document 3000 for work protocol as .pdf documen
- Calibrate 3000 for fiducial recognition with camera
- Inspect 3000 for automated optical inspection (AOI)
- API 3000 for remote controll and connection to your own applications
- QR-Code 3000 for easy documentation

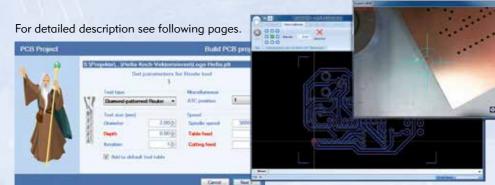

- Spindle speed setting by software from 30000-63000 1/min (5.000 - 100.000 1/min for CCD Premium)
- Inclusive spindle guick stop
- Support of manual tool change (MTC) or automatic tool change (ATC)
- Drilling and routing diameters > 0.1 mm
- Driver software for Excellon, Sieb & Meyer or HP / GL data on Windows XP .... Windows 10<sup>TM</sup> (32 - or 64-bit) with convenient user interface
- Improved tool-statistics with parameters for up to 99 tools
- Screen presentation of milling vectors and drill holes
- Selection of vectors to be processed + drill holes using the mouse on the screen
- Working progress indicator on the screen
- Milling and drill files can be simultaneously loaded and executed successively by simply switching the file.
- · Real-time capability with handshake on work progress for controlled operation and stops
- In combination with optional USB CAMERA, picture is displayed on the computer screen with a crosshairs target.
- · For upgrade of machines elder than 2006, we can convert the controller of the CCD.

# **CCD OPTIONS**

### Plus 3000

Bungard extra modul With this module activated you will get the following extra features:

- You may load up to 32 layers per project !
- In the Wizard you may select the type of project, depending on your selection, the project will be stored under the project type name. This can be useful to separate projects meant for PCB or stencils etc.
- You may position the machine by moving and clicking with the mouse in the camera screen. It will also try to center the drill hole. This can be useful if you want to capture the holes from an existing PCB.
- Under the tab GENERAL you may set the origin of your material. This can be the zero position of machine but can also be calculated from the material position.



Page 56

straight away himself or start the next CAD job, e.g.

with ISOCAM 5.0 and pass the PCB production

to a machine operator. That way your Bungard

CCD in combination with Routepro 3000 is used

for large scale production of printed circuit boards.

You will be supported by a wizard that leads through

the project and of course by an online help function.

Modern optics with Windows 10<sup>™</sup> ribbon bar,

· Machine and tool parameters are stored job

• A wizard ensures that all tools are properly

• Tool parameters can be stored according to

Machine configuration graphically interactive

• In the standard RoutePro 3000 up to 4 files are

read in at the same time; e.g. reference holes,

drill file, milling file top and milling file bottom.

Detailed online help with step-by-step instructions

• All parameters (speeds, scaling, offset, etc.)

• Units can be switched from inches to metric

floating or docking windows

provided with parameters

material and router or drill type

• Log files for easy online support !

configurable.

• Language module for easy translation

FEATURES:

related


Latest and updated product specification is published under www.bungard.com (C) 2024/2025 Bungard Elektronik



• Under the Views tab you now have the following extra' s:

- Show material

- Show the mounting holes

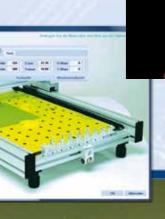


2.0	and the second se
Nameseratelikasen Regest 2020 Kannos Regest 2020 Hannes	
1) Colore	Die unter gespie Die Befandente gespie
dan *	a
Serviced Longo (1982)	and assisted
Auge Dig	Auto (A)  000
National Part 1 (1000 (2) 1 (Exercise (2))	terister (D +

10m 42 ha 42 2 3 1

· Set the intensity of the line grid · Set the intensity of the dot grid · Set the intensity of the table view

 Show the ATC tool-slots and depth sensor • Under the Help tab you'll find two buttons to open the location of the current project and the documentation.



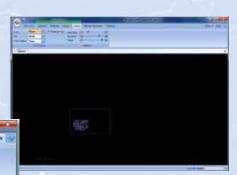



.

 $(\bullet)$ 

 $(\bullet)$ 

# **CCD OPTIONS**

LaserPro 3000 **Bungard Laser Module** 

the RoutePro 3000 software.



The Bungard laser unit is an add-回到透明 on-item for the Bungard CCD to expose photoresists, solder masks and Alucorex. The laser is mounted into the spindle holder instead of the high frequency spindle and is controlled by

LASERPRO 3000

Magnetic safety switch, laser turns on only when laser

is mounted facing down into the CCD holder

Laser class:

Dimensions (LXBXH):

PVC housing

Application

Power connection:

Power:

Safety:

class 3B

120mW

47 x 47 x 110 mm

Via Bungard CCD

Via Bungard CCD/RoutePro3000

The Bungard laser exposure unit is an answer to the demand of many operators for higher precision, faster processing speeds and reduced tool costs compared to other technologies as for example isolation milling.

## DispPro 3000

**Bungard Dispensing Module** 

The dispensing module DispPro 3000 is an extension of the CCD for dispensing solder paste or glue.




Instead of being controlled by a foot switch, a pneumatic manual dispensing unit is controlled over the software modul DispPro 3000. A dosing cartridge of the dispenser is mounted into the holder of the high-frequency spindle.

The module is not a fully automatic dispensing unit, but a dosing aid for a manual dispenser.

The machine drives precisely to each dosing point and dosing time dosing height are precisely controlled.

Further settings like viscosity control and control of the dosing volume are not supported. The control of these parameters is subject to the user.

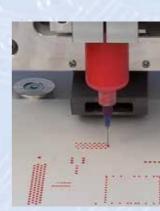

# Calibrate 3000

you can visually calibrate the position of your board. The



- be placed correctly
- already finished.



Application:: Scope of delivery

Features:

System requirements:

**Bungard Calibration Module** With the calibration module,



software moves and rotates the board according to the actual position of the calibration marks or registration holes.

For this purpose, the machine automatically drives to certain fiducial registration points on the layout and the user centers the cross mark of the camera over the mark and acknowledges the position. Registration holes can be easily inserted e.g. with IsoCam. Height calibration is also possible with the help of standardized templates.

The calibration function is useful if you e.g. do not want to work with reference pins for double-sided boards, or the board has been changed by other process steps (pressing multilayer, galvanic through hole plating), so the reference pins may lead to inaccuracies.

Another typical application is the rework, e.g. if after components assembly the circuit board can no longer be fixed with reference pins to the base.

Rework could also be:

 You received a board from a customer and the adjustment holes of the board are too small and you need to drill them with a bigger tool





**DISPPRO 3000** 



Dimensions Weiaht Input Voltage Internal Voltage Air inlet: Air outlet: Hold back vacuur Control: Requirements

220 x 210 x 67 mm 1 ka 100 – 240 VAČ 24 VDC 5-7 bar 0,1-7 bar Non-Drop System Via Bungard CCD/RoutePro3000 Bungard CCD Dispensing license DispPro3000 for Route-Pro3000 connection to compressed air Dosing of solder paste and glue

Application:

• You have a dispense unit installed and want to calibrate the PCB, so the dots will

You want to cut a hole in a PCB that was


• You want e.g. calibrate a possible offset between drilling-/milling spindle to a dosing needle or the laser exposure head.





### CALIBRATE 3000

Fiducial recognition for PCB inspection, Machine calibration Camera with USB-cable, holder to connect camera to CCD, possibly an active usb-extension is needed. This is not part of delivery. HD-Video with 720p, Autofocus, high precision lens with glass elements delivers sharp image quality, TrueColor-Technology, automatic exposure for brilliant videos in vivid colours. HD video recording at 720p, records up to 30 pictures per second in real HD quality. Clear Frame-Technology: exceptional even in low light conditions for smooth, detailed videos Optimized for Windows 10. Quick set-up, no driver installation required. Windows 10, Windows 7, Windows Vista, Windows XP (SP2) or higher (exception Windows XP 64-Bit). At least: Intel Dual-Core 1,6 GHz or higher , 1 GB RAM. Recommended: Intel Dual-Core 3,0 GHz or higher, 2 GB RAM USB 2.0, Hard disc: 1,5 GB of free storage

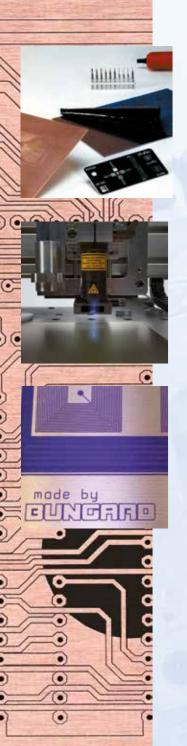

# **CCD OPTIONS**

# Inspect 3000

**Bungard Inspection Module** With this module you can use



a Bungard CCD for AOI-drives (Automatic Optical Inspection). If you have started Inspect3000, the machine

will travel to the first drill position and waits there, so you have time to look at this position closely. If you press start, the next position will be shown.

Note: This function will only work on drill layers.

### Document 3000 **Bungard Documentation Module**

This documentation module will provide outstanding documentation which you can use for future reference.You



may also handout the project documentation to your customer along with the finished boards.

When the documentation module is activated you'll find a new button under options: PDF

Pressing this button will generate a complete PDF document, containing all the machine settings. This includes activated licenses, correction factors, serial numbers, tool defaults for routers, drills, laser and dispense tools and many more.

3. XY Motor	
Speed Setting	
Max, speed	
Reference	
Start/stop Speed	
Start/Stop	
Ramp steps	
4. Z Motor	
Speed Setting	
Max. speed	8250
Reference	
Start/stop Speed	
Start/Stop	900
Ramp steps	
5. Spindle	
Speed Setting	
Minimal	
Maximal	63000
Start-up Delay	
Delay	
6. Calibration	
Motor calibration	
X motor	0.941



API 3000

**Bungard Application Module** The special application mo-



The actual interaction with the CCD takes place via a programming environment. Thanks to API 3000 the CCD can be remote controlled and connected to your own applications.

dule API 3000 of Bungard extends the Bungard CCD circuit board plotter on the system customized software RoutePro 3000 and so fulfills many additional customer requirements. Measuring instruments or tools may coupled to the CCD, and all the data are processed via RoutePro 3000.



**QR-Code 3000** 

**Bungard QR-Code-Documentation** 

A QR-code documentation provides fast and without much effort all necessary information about projects and workflows of a manufacturing process. The module QR-Code 3000 generated a very individual QR-code for every project of Bungard CCD at one touch by using the software RoutePro 3000. A unique code can be printed directly with a label printer and glued at the desired position of the board or workpiece. Behind the square matrix out of black and white dots, representing binary encoded data, information is optionally hidden for internal quality assurance and external customers. They document the manufacturing process of printed circuit boards, the workpieces and the deposited project name, the type of machine or operator.





**Modules for RoutePro 3000** 






Plus

3000

Calibrate 3000

Inspect 3000

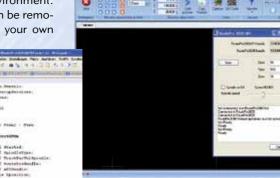


The QR-code can be read with a standard 2D scanner or a smartphone. So the QR-code Lable enables to call up the appropriate files in reissue of old projects. With an additional documentation license, the QR-module QR-Code 3000 offers other advantages for changes and extensions in future within a project.

.....



BUNGARD



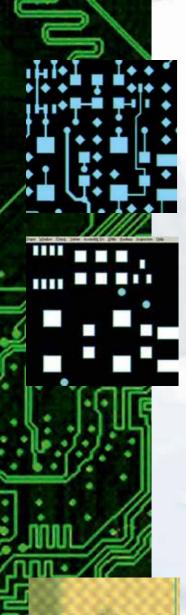

### PROCESS CONTROL AND AUTOMATIC OPTICAL INSPECTION

# **QUALITYSCAN 3000**

### What is QualityScan 3000?

QualityScan 3000 is a fully integrated, stand-alone process control, measurement and inspection workstation for use in many applications in multiple industries.

QualityScan 3000 uses a PC Windows based software package integrated with a highresolution, calibrated, A3 size flatbed scanner. This combination allows for inspection of parts at virtually any stage of production. Parts can be inspected versus Gerber data, CAD data or Golden parts. **Benefits**:

- Catch problems BEFORE production floor -"Virtual problem"
- Catch problems DURING production "Sampling for SPC"
- Eliminate REWORK
- Environmentally friendly
- Maximize existing capital investment

BUNGARD

Reduce operator, engineer & management stress

### Why QualityScan 3000?

- QualityScan 3000 systems are the standard in the industry for PCB/stencil/emulsion screen/film inspection – it's the leading system in the world!
- Inspection is needed It is not acceptable to ship or use defective parts!
- QualityScan 3000 is the lowest cost complete inspection system in the industry
- 100% inspection of part using CAD data or a Golden Part
- Inspect a wide variety of features on a single system... multi purpose
- Inspection of parts in any material including FR4, Polyamide, Rodgers, Thermount.
- Or plastic, paper, diazo, glass, chrome, electroform, stainless, silicon, etc
- Systems are very easy to use and based on a standard PC platform
- Optionally, create or modify CAD data to match existing parts when data is lost









Local CLW G LMA

G Pad

(" Pad

Filer Aris

Contract

AutoDe

**Dual Monitor Option** 








EPSON

Bether Company Child	
Algement (LMA) – Position of Genter vs Raster is NOT adjusted ( – LMA adjusts position of Genter vs Raster dure	SCARSTERCIL INSPECTION RESULTS DOCUMENT Jub Name: Samplejob Size of scannes areal 0.500 x 0.240 fnch _14.22 x 15.72 mm
- used for inspecting localed features (a) Tracks - used for inspecting features with connec	306 scanned at 2000 091 september 19 2001 11:21:20 Last 2000 DBT colfsration done on: September 19 2001 11:00:00 Default Accuracy Level 1.8 mlts ( 44 microns), 90 Apertures Check Accuracy Level 1.9 mlts ( 35 microns), 2 Errors Local Micro Alignment on (pabl)> Inspection time 7.3 minutes
SE 2 mile (lever D7) Presiden	Errors: X 2003 W X 00 0.428, 0.476 10.88, 12.09 0.468, 0.476 11.89, 12.09
I Helogram I Inspec	operator Name Signature:

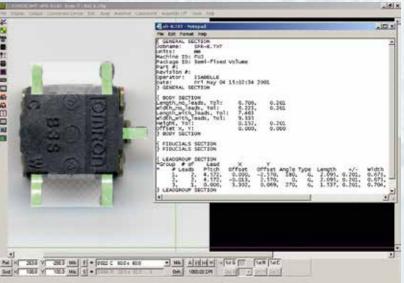






### **QUALITYSCAN 3000**

0.0 +1 0.0 mile

Power consumption:

Dimensions (LxWxH): Scan resolution: Absorbance: Weiaht:

45 W 2.8 W (Low modus) 0.5 W (Standby) 656 x 458 x 158 mm 2400 dpi x 4800 dpi 3.8 Dmax approx. 14.5 kg

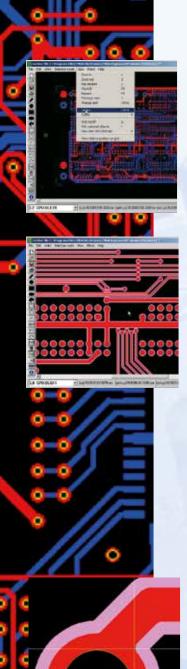

# DATA CONTROL CONVERSION ISOLATION MILLING

Feel free to test in advance!



# ISOCAM

IsoCam 5.0 (Pro) and IsoCAM3000 are two software solutions for the machining and production of CAD-designed PCBs.


IsoCam 5.0 offers basic functions such as the import of Gerber, HP/GL and drilling data, various machining options and an integrated insulation milling program. As well as the creation of free areas (Rubouts). Upgrading to Isocam 5 PRO is possible. Then with more import and export functions (see table). more advanced software solution. It features support for a wider range of file formats, impressive software resolution of 1 nanometer, and advanced algorithms for tool path calculation. IsoCAM3000 also allows users to automatically detect design violations and fix them with forced isolation. Other advanced features include cloning, rotating and panelizing objects, as well as integrating QR codes and other additional objects.

A more recent development is IsoCAM3000, a

For developers who use a lot of ground layers in their design, IsoCAM3000 could be the ideal choice. However, if the advanced features of IsoCAM3000 are not of interest, IsoCam 5.0 offers a more costeffective yet efficient alternative.



Demo versions in the download of our website: www.bungard.de/en/service/downloads#demo

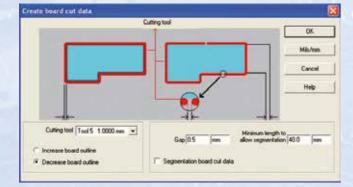

Result of an isolation milling using ISOCAM software

ISOCAM®	5.0
Gerber read / output (standard/extended)	YES
HPGL read / output	YES
Output Excellon for milling data	NO
DXF read / output	NO
Read / output bitmap	NO
Read in / output drill	YES
G-code output	YES
Optimize arcs	NO
Scaling	NO
Save job file	YES
Generate milling data	YES
Number of tools per insulation calculation	2
Number of tools per residual copper removal	2
Generate milling data for selected objects	NO
Units: Mils / mm / Inch / HPGL	YES
Design rule check	YES
Display milling direction	NO
Change milling direction	NO
Change start point of milling chain	NO
Mark whole milling chain	NO
Create solder stop mask	NO
Autosynchronize layers	YES
Add alignment holes	YES
Compensate board breakouts	YES
Mirror function	YES
Good zoom function	YES
Add objects	YES
Software Resolution	0.1um
Removes spikes (IPD)	NO
Forced isolation paths for problematic constrictions according to design review	NO
Windows coverage	XP to Win1

constrictions according to design review	
Windows coverage	XP to Win10
License protection with dongle	YES
Calculations with multiple threads	NO
Calculation speed of toolpaths / Milling data	Slow
Automass	NO


清洁市

is publish

BUNNEY BRANK

in,

		101
5.0 PRO	3000*	
YES	YES	
YES	YES	14
YES	YES	
YES	YES	114-225-24
YES	YES	
YES	YES	3// 671
YES	YES	1// 423 1
2	8	Xxx 67 1
2	8	1777 1 1 N U
YES	YES	1111 183 111
YES	YES	11 6 4 11
YES	YES	1 45 N/ 1
YES	YES	1/1/ 9
YES	YES	
YES	YES	NEY 7 //
YES	YES	Dal II and I
YES	YES	577 // SSL/3
YES	YES	77 17 STAD
YES	YES	1 111 3 3 11 11 11
YES	YES	
YES	YES	
YES	YES	11/1/1/1/1/1/1/1/1/1/1/1/1/1/1/1/1/1/1/1
YES	YES 0.001um	(77.55 (777.55)
0.1um NO	YES	7 SEI 1777755
NO	YES	9 × 2 / // ×
NO	TLJ	
XP to Win10	XP to Win11	1 ( ) ( ) ( ) ( ) ( ) ( ) ( ) ( ) ( ) (
YES	YES	6
NO	YES	· · · · · · · · · · · · · · · · · · ·
Slow	Very Fast	
NO	YES	4
		11/1
1 DE	2	and the second
en tapage e C C anno - C S al S N S RM	4 8 8-8 10 apen 1 100	04 (2)-
	dta:	

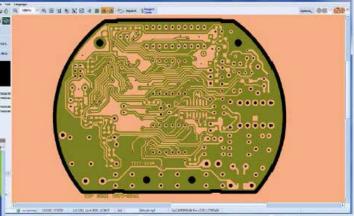

\*It is NOT possible to upgrade from 5.0 or 5.0 PRO to ISOCAM 3000.

I and the first







# **COMPACTA 30**

### THROUGH-HOLE-PLATING LINE

This machine from the COMPACTA-series was consequently designed to meet the demands of professional direct metallization.

It can take boards up to 210 x 300 mm<sup>2</sup> and has 5 treatment tanks (cleaning - pre-dip - catalyst - intensifyer - reserve tank) and one galvanic plating tank.

Two treatment tanks are thermostatically controlled and equipped with a teflon heater.

Bath movement on all tanks is performed with DCgear motor. The stroke speed is stepless variable.

The galvanic plating tank comes with an integrated air injection and a stepless regulated rectifier. A Volt- and an Amperemeter show the current electric values.

CILL

...

BUNGARD

Picture of COMPACTA 30

000

....

00200

....

Special emphasis was put on a unique rinsing technique. A double cascade rinse and a spray rinse, the latter activated via foot switch and a magnetic valve, are integral parts of the COMPACTA 30.

We also offer the COMPACTA as a complete system including chemicals, anodes, anode holders and board holders.

(	COMPACT	4 30
Tank dimensions	treatment tanks	galvanic copper tank
uniensions	TUTIKS	copper turk
Length:	400 mm	400 mm
Width:	100 mm	275 mm
Depth:	300 mm	300 mm
Capacity:	101	30 I
		1050
Total size (LxW	,	x 1350 mm
Working level:	950	
Weight:	approx	. 80 kg
Heaters:	2 x 4	W 00
Rectifier:	1 x 6 V	(, 40 A
Bath movemen	t: DC-gea	r motor

230 V, 50 Hz, 6.3 A

Power supply:

...

OMPACTA

# **COMPACTA 40 2CU**

### THROUGH-HOLE-PLATING LINE

Based on the same principle of construction as our Compacta 30 series, the Compacta 40 2CU is optimized for higher productivity. You can manufacture boards with a maximum size of 300 x 400 mm<sup>2</sup>. This enlargement plus an integral, second plating bath leads to almost 4 times higher daily throughput with only little more space requirements.

Based on the COMPACTA-series we also produce machines for other chemical systems.

COMPACTA 40 2Cu		
Tank	treatment	galvanic
dimensions	tanks	copper tank
Length:	500 mm	500 mm
Width:	100 mm	300 mm
Depth:	450 mm	450 mm
Capacity:	20 l	60 l
Total size (LxW Working level: Weight:	/xH): 1200 x 118 950 approx.	

Heaters:

Rectifier:

Bath agitation:

Power supply:

2 x 800 W 2 x 6 V, 80 A DC gear motor 230 V, 50 Hz, 2,5 kW





BUNGARD

### THROUGH-HOLE-PLATING **OR COATING**

Regardless of whether it is through-plating, applying electroless nickel gold or extremely thin SOLGEL/lacquers, the Multicoater can do both.

systems of our HITEC PLATE series.

### Features

- menue
- program storage on board
- user selection menue
- process parameters adjustable



Latest and updated product specification is published under www.bungard.com (C) 2024/2025 Bungard Elektronik

Latest and updated product specification is published under www.bungard.com (C) 2024/2025 Bungard Elektronik

Picture of COMPACTA 40 2CU


### Alternatives for improved surface qualities:

Bungard is also experienced in galvanic nickelgold-systems for long lasting, bondable surface quality. Moreover tin-, blackening- or sealbond-systems are available. Contact us for your individual, customized solution.

A CNC axis system, also for already installed

• Tanks customized to your needs • automized process controll by touch screen



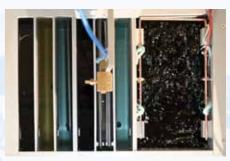

### **MULTI-COATER**

Dimensions (LxWxH): Power supply: Weight: Tanks: Board sizes:

830 x 900 x 2000 mm 210 x 300 mm approx. 200 kg 10/20/30 Liter 230 V~,50/60 Hz

Siehe auch Katalogseite 75





RLM 419 P

TEMP. CONTROL

1 15 QVA

# **HITEC PLATE 3040**

### UNIVERSALLY ELECTROPLATING MACHINE

The HitecPlate 3040 is a universal electroplating system for the deposition of metals and is used for the production of plated-through printed circuit boards in vertical technology for prototype and small series production.

The HitecPlate 3040 is designed for direct metallization and has baths for process steps of cleaning, rinsing, pre-dipping, activating, rinsing, intensifying, rinsing, copper plating.

### Features

- Benefits of machine
- Modular construction
- Compact design
- Easy operation, easy handling
- Clean work flow
- Uniform deposition of copper on the surface and the drill hole
- Automatic rinse water exchange possible

### Construction of machine (basic module)

- Machine frame completely made from PVC
- 5 treatment basin
- Electroplating tanks
- Separate rinsing section for every process step
- Automatic rinse water exchange possible
- Anode frame
- Drain valve and cover for each basin
- Air injection for copper bath
- Agitation on all tanks, infinitely adjustable
- 2 Titanium heater
- Main switch
- · Electronic rectifier, current or voltage constant mode

# BUNGARD

### **HITECPLATE 3040**

Function: Max. Board size Power supply: Power consumption Volumen Treatment to Volumen Galvanic tanl Weight: Dimensions (LxWxH): Working Height:

	Plating-through-hole, copper galvanic
	300 x 400 mm (350 x 450 mm)
	230 V AC, 50 Hz - 60 Hz
	2000 W
ıks:	20
::	60
	200 kg
	1520 x 1250 x 867 mm
	900 mm

### Optional extensions processes:

- Because of the modular structure the following additional processes can be integrated into the equipment:
- Tinning (subtractive technology)
- Desmear, Blackening, tin stripping
- Immersion Tin
- Organic protective layer (OSP)
- Electroless nickel / gold or
- Immersion Silver
- Galvanic nickel / gold
- Stripper negative resist

# **PROTEC 2030 + 3040**

### **IMMERSION TIN FOR PERFECT** LEAD-FREE SOLDERING

The PROTEC SN is a professional equipment for the production of final surfaces of printed circuit boards. The machine includes all necessary tanks and electrical equipment in a very compact design.



# **RLM 419 P**

### DRY FILM LAMINATOR

The RLM is a dry film laminator especially made for small companies, schools, research and development departments. All commercial laminates for PCB manufacture and mould-etching technique can be processed. Due to adjustable pressure control and adjustable laminating speed, solder mask application is also possible without problems.

### Features:

- Easy and fast mounting of resist rollers of all common coil diameters
- Detachable inlet table for easy access to lower resist roll

- uniform temperature distribution laminate transport
- temperature



PROTEC SN with the ORMECON®-process guarantees:

- Planar surface for SMD technology
- Pure tin deposit, even with high copper load of the bath
- Significant reduction of diffusion velocity
- Multiple soldering possible, even with inter-

The design of the PROTEC SN enables to extend or reduce the equipment depending

**PROTEC 3040** 

2 pieces per 800 W



• Infinitely adjustable laminating speed

- Electrically heated lamination rollers with
- Separate transport rollers for non-creasing
- Digital setting and read out of lamination
- Manually adjustable lamination pressure • For all common dry film resists with 3 and 5 inch core diameter
- Suitable for solder mask application

### RLM 419 P

Lamination width max.: Transport width max.: Lamination speed

Resist tension: Lamination pressure Temperature range

Power supply: Weight: Dimensions (LxWxH): 690 x 630 x 570 mm

400 mm 440 mm 0.2-1.2 m/min adjustable adiustable adjustable 20 - 120° C digital setting 230 V 50 Hz / 2 kW 38 kg



# **RBM 300**

### **BRUSHING MACHINE**

A professional brushing machine designed for use in small series production and laboratories. High guality wet-processing brushing machines for PCB production at low price are possible! The proof is the Bungard RBM 300. The smaller sister of our RBM 402 is reduced wherever possible but not at quality, endurance and high precision details. Features:

- The RBM 300 has an oscillating brush with quick change device
- Oscillation frequency and transport speed are stepless variable
- Parallel height adjustment. In contrary to the single sided height adjustment, you will achieve a long term even brushing result only with double sided parallel height adjustment.
- Machine is equipped with a finishing brush used before laminating. Various brushes available.

- Working width 300 mm
- Despite its small size, the RBM 300 has a full scale squeeze-off and hot air drying compartment
- As bench top model the RBM 300 has no integrated water treatment. A closed loop rinsing tank is available as an option
- Single side action
- Aluminium, PVC, Stainless Steel construction
- Transparent top lid with security switch
- Mechanical drying by squeezing rollers

### **RBM 300**

300 mm
0,3 - 3 mm
1360 rpm
0.2 - 2 m/min
10 mm
approx. 10 - 110 1/min
approx. 0,2 - 2 m/min
nsumption: 6,8 l/min.
230 V~, 50 Hz
760 x 590 x 415 mm
80 kg

# **RBM 402 KF**

### **BRUSHING MACHINES**

The RBM 402 KF series is the highest developed brushing machine in our range and can be used for practically all cleaning operation during PCB manufacturing. It is ideally suited for professional prototyping or smallbatch production in modern PCB laboratories. The RBM 402 consists of a double sided wet processing brush compartment, a rinsing and a following squeeze-off zone and hot air drying compartment. The solid construction guarantees proper function and a long life time with a minimum of maintenance.





Picture of RBM 402 KF



# **RBM 300 KF**

 Closed loop water management with filtration. Stand alone with rack and integrated water tank.



### Latest and updated product specification is published under www.bungard.com (C) 2024/2025 Bungard Elektronik

### Page 70

• simple brush exchange via guick change

Features:

device

hand wheel

adjustable

• precise parallel brush adjustment with

Oscillation and transport are stepless

• Digital read out for board thickness and power consumption of the brush motor

• Upper and lower brushing rollers are adjustable in pressure and have a digital read-out for the settings.

• The wet-processing system comes together with a powerful squeeze + hot-air dryer.

• The "KF" is indicating an integral closed loop rinsing system. That is urgently recommended in order to comply with German and European waste water regulations.

### 400 mm Working width: Conveyor speed: 0.2 - 2 m/min Oscillation stroke: 10 mm 10 - 110 lifts/min Oscillation frequency: Brushing roller length 410 mm 89 - 91 mm Brushing roller outside diameter: Brushing speed: 1360 rpm Board thickness (rigid boards only): 0.3 - 5 mm Board sizes: (min.) 80 x 175 mm Rinsing system water inlet: 19 mm Rinsing system water outlet: 40 mm 26 l/min. Rinsing system water consumption: 230 V, 50 Hz, max. 16A Power supply: Dimensions (LxWxH): 1110 x 750 x 1160 mm 220 kg (RBM 402 KF) Weight: 170 kg (RBM 402 BLC) Brushing stroke on upper roller: max. 20 mm Brushing stroke on lower roller: max. 15 mm Feed per turn of hand wheel: 0.266 mm Brushing roller inner diameter: 35 mm Rinsing system pressure: max. 1.5 bar

Also available version:

**RBM 402 BLC:** bench-top low cost version

RBM 402 KF: closed-loop version with tank and candle filters

### **RBM 402 KF**



RDC30 multidip

# **AIR 2000**

### CONVEYORIZED PCB DRYER

Air 2000 is a conveyorized PCB Dryer. Adjustable transport speed ensures perfect drying of holes and surfaces after all wet process sequences.



### Features:

- Continuous drying
- Variable transport speed
- Suitable for different board thicknesses
- Low surface temperature • Short heating-up time
- High throughput
- Bench top machine

Air vent with damper

and visual alarm

High quality construction

### AIR 2000

Working width: 300 mm Board thickness: 0.2 - 4 mm Minimum board length 80 mm Transport speed: 0.2 - 1.2 m/min Heat up time: 362 x 352 x 520 mm Dimensions (LxWxH): 230 V 50Hz Power supply

Multiple overtemperature protection with audible

Self-diagnostic system with fault indication

• Programme stored in case of power failure

controlled by air flap control in 10% steps

• Program stored in case of power failure

· Adjustable addition of pre-heated fresh air

5 sec.

RDC 1	5
NDC I	J

### **DIP COATER**

The RDC 15 is a machine designed for laboratory dip coating of modern liquid photoresist. Today a more and more popular application is the so called: "sol-gel-application". This machine was developed to meet the demand of a greater variety of speeds, iterations, dipping and drip off times and heavier workpieces.

### Features:

- Lift bar for several workpiece fittings. The dipping height and the sizes of the aluminium profiles can be easily adapted to even dip-coat bulky items.
- The insertion and the drawing or coating speed is separately adjustable from 30 mm/min until 10.010 mm/min.
- The dipping time as well as the drip-off-time (pause time up and down) is separately adjustable from 0 s up to 99h : 59min : 59s. This enables the machine not only to coat but to precisely develop. This is of great importance with certain photo coatings of the miniature etching technology.
- Up to 8 iterations are possible.
- The working range of the lift bar can be adjusted via the control panel. The maximum size of the workpiece is therefore only limited by the maximum lift range of the machine and the size of your cuvette.

ROW

# **RDC 21-K**

and heavierwork-pieces.

# **ULX 110**

### DRYING AND CURING OVENS

The universal oven is our classic appliance for temperature control in science, research and material tests in industry.

This machine is a perfect masterpiece in terms of technology and is made of high-quality, hygienic, easy-to-clean stainless steel. In regard of ventilation and control technology, overtemperature protection and precisely tuned heating technology all possible aims are perfectly fulfilled.

### Features:

- Forced air circulation by quiet air turbine, adjustable in 10 % steps
- Adaptive multifunctional diaital PID-microprocessor controller with high-definition TFT-colour display
- Digital backwards counter with target time setting, adjustable from 1 minute to 99 days

### **ULX 110**

Max. loading of chambers 175 kg 864 x 745 x 864 mm Dimensions (LxWxH): 400 x 560 x 480 mm Inner dimensions (LxWxH): 1081 Liter: Net weight approx.: approx. 78 kg up to + 300°C Temperature Range: Power supply: 230 V~,50/60 Hz / approx. 2.800 W









### RDC15

Stroke length: Maximum load Weight Dimensions (LxWxH): Insertion speed:

Drawing speed:

Dipping Time: Drip Off Time: Iterations Power supply:

0 - 600 mm 1.5 kg 12 kg 330 x 465 x 965 mm Programmable from 30-10.010 mm/min Programmable from 30-10.010 mm/min 0 s – 99 h:59 min.:59 s 0 s – 99 h:59 min.:59 s Up to 9 times 100 – 240V, 50-60 Hz, 120W

The RDC 21-K is a machine designed for laboratorydip coating. They can be used to apply liquidphotoresists to e.g. miniature etching parts or othersubstrates, to apply liquid solder mask or any otherkind of protective or technical coating. Today amore and more popular application is the so called: "sol-gelapplication". This machine was developed to meet the demand of a greater variety of speeds, iterations, dipping and dripping times

### Advantages compared to RDC15:

- Foil keyboard for easy data entry
- Virtual end switch avoids unnecessary drives • Separate speed settings for dipping, coating and positioning drives possible
- Stronger Stepper motor enables a 4-times higher load (5 kg instead of 1,5 kg).
- Minimum speed down to 1 mm/min. As an option 0.5 mm minimum speed also possible
- Parameters are stored for the next job after switching off machine

DDC 21 V

• Controller is tiltable and removeable

RDC	21-N
Stroke length:	650 mm
Maximum load:	5 kg
Weight:	12 kg
Dimensions (LxWxH):	330 x 465 x 965 mm
(Height	1030 mm with controller)
Insertion speed:	Programmable from
	1-3000 mm/min
<b>-</b>	or 0.5 - 1500 mm/min
Drawing speed:	Programmable from 1-9999 mm/min
	or 0.5 - 4999,5 mm/min
Dipping Time:	0 s - 99 h : 59 min : 59 s
Drip Off Time:	0 s – 99 h : 59 min : 59 s
Iterations:	Up to 1000 times
	100 – 240V;
Power supply:	,
	50-60 Hz, 120 W



Start

**Prozess Parameter** 

Config

0

# **RDC 30 MULTIDIP**

The RDC 30 dip coater is a logical further development of the RDC 21-K. In addition to the precise immersion processes, it allows the use of up to 6 different liquids in an almost infinite number of possible sequences.

The devices are used for the photoresist coating of form-etched parts and substrates, for the application of liquid solder resist masks and for coating with protective lacquers in general. A new and interesting field of application are so-called SOL-GEL applications.

• Rotary table with 6 cups for multi-coating!

GUNGARD

- Each dive individually programmable (diving, drawing speed, dipping and dropping time)
- integrated magnetic stirrer with programmatic function and speed (1 - 999 1/min)
- Diving and drawing speed between 1 3000 mm/min
- Distance speed is separately adjustable from 1 - 9999 mm/min

• Save this job and job iterations possible



### COATING OR THROUGH-HOLE-PLATING LINE

The new solution for your laboratory.

Do you want to plate through hole?

Or do you need to apply Nickel Gold (electroless)?

Or do you want to apply other coatings like SOL-GEL?

This multicoater is your answer!

Gantry system also for existing HITEC PLATE machines from Bungard

### Features

- Tanks customized to your needs
- automized process controll by touch screen menue
- program storage on board
- user selection menue
- process parameters adjustable







The handling system of MULTICOATER is very flexible. You can load and save programs.











### **RDC 30 MULTIDIP**

Stroke length:	0 - approx. 650 mm
Maximum load:	5 kg
Weight:	15 kg
Dimensions (LxWxH):	380 x 470 x 1030 mm
	(Height 965 mm wihtout controller)
Insertion-/Drawing speed	l: 1-3000 mm/min
(optional)	0,5-1500 mm/min
Distance speed:	1-9999 mm/min
(optional)	0,5-4999,5 mm/min
Dipping Time:	0 s bis 99 h:59 min.:59 s
Drip Off Time:	0 s bis 99 h:59 min.:59 s
Iterations:	Up to 1000 times
Power supply:	100 – 240V,
	50-60 Hz, 120 Watt



### **MULTI-COATER**

Dimensions (LxWxH): Power supply: Weight: Tanks: Board sizes:

830 x 900 x 2000 mm 210 x 300 mm approx. 200 kg 10/20/30 Liter 230 V~,50/60 Hz

### You can TEACH positions

We will supply s	standard	programs.
------------------	----------	-----------

Futur 1	- Passal	Proz	es Parar	Notor Kotat	Final Street	-
21	-22	-28.	-26	141	124	-20
				-	-1044	-
	- 92		-46	1440	536	- 41
75	1255	175	250	-75	350)	275

# **BUNGARD PICK&PLACE SMT3000**

Manipulator for the production of prototypes and small series. The patent-registered Pick & Place head enables the comfortable handling of SMD-components. The modular-built system can be configurated for every use. It realizes the complete process - starting by dispensing of solder paste or glue up to assembling different components.



### Features:

- Ergonomic
- Integrated dispenser unit
- Camera fixture
- X/Y-locking device
- Head lightening
- PCB holders
- Desktop workplace
- · High end quality

### Vision system

By means of a camera attached directly to the assembly head, you can view the entire pick & place process - enlarged on a monitor.

### X/Y-locking device

The X/Y locking device ensures precision mounting. Individual movement axes can be locked. An automatic function independently locks the X and Y axes when the components are lowered or when placing a dispenser dot. This makes it particularly easy to place Melfs.

### Head lightening

The dual LED-light of the pick and place area can be integrated optional. The LEDs are placed on both sides of the nozzle and enable the constant and permanent lightening under the assembling head. The integration into the control mode of the Manipulator allows the menu routed activating depending on application.



### **PCB** holders

All manipulators have a universal circuit board holder by standard for single- or double-sided PCBs. Elastic holding fingers are adjustable and hold the board in place. Large PCBs can be handled on demand. Customer-specific holders can be adapted or realised directly at our plant.

### **SMT 3000**

Assembling:	300-600 SMDs/hour
Dimensions (LxWxH):	600 x 600 x 345 mm
Max. outreach (LxWxH):	600 x 1100 x 345 mm
Max. PCB size (LxW):	440 x 245 mm
Max. assembling area (LxW):	350 x 245 mm
PCB thickness:	0,5 mm to ~ 4 mm
Height underneath PCB: mir	n. 39 mm, max. 50 mm
Components: Chip 0201	bis QFP 0,65 mm pitch
Max. component height:	approx. 16 mm
Hub of assembling head:	max. 26 mm
Rotation angle:	0-360°
Weight:	approx. 23 kg
Power supply: 100-	230 V AC, automatical
Input:	max. 50 VA

### (Only by dispensing unit):

clean, oil-free compressed-air, max. 4 bar, 1,5 l/min consumption while dispensing pressure connector for tube iØ 4mm, oØ 6mm

### COMPONENT FEEDER

The system enables the feeding of components in tapes as well as loose components.



Carousel

### Tape strip feeder

This feeder type can handle a single strip of





# **HOTAIR 06**

### **REFLOW OVEN**

The HA06 is a solder oven for SMD component with the use of lead free paste.

The oven is work-ing with full convection forced air during the preheat stage. When the reflow stage is entered the heating will be done by hot air and quartz lamps.

The lamps are needed to get a short ramp speed. Once the reflow set point is reached the lamp power will be reduced to a minimum. At this point 85% of the heating is caused by forced hot air. This unique feature makes the oven suitable for solder big SMD components and/or components with pads under their casing while using lead free paste.

With good maintenance and proper use the oven will serve your solder needs for a long time with high quality solder results.



### Some of the features include:

- Outstanding reflow soldering quality for SMD and hybrid
- Two heating zones
- Microprocessor controlled
- Reflow process view

IN SEC. CO.

() R

a

The antistatic manual carousel with 45 shelves feeds loose components in a com-

### Tapefeeder

Tape feeders supply you with large amounts of standard components. While removing the cover-tape, the tape is automatically feeded and the components, that should be placed next, are revealed.





### **Bulk container**

a component tape. Each part can be picked up directly from the tape, it isn't necessary to decante them into bulk containers first.

The patented bulk containers provide resistors, capacitors and ICs out of small containers to the machine.








Hot air quartz oven Cures SMD adhesive


### HOTAIR 06

208/240 V1 phase 50/60 Hz Power req.: Rated power: max. 3650 W Dimensions (LxWxH): 550 x 490 x 335 mm Max. Substrate surface: 300 x 370 mm Number of heating zones: 2 zones microprocessor controlled Preheat time: 0-999 sec. Preheat temp: 60 - 260°C Reflow Time: 0-999 sec. Reflow temp: 90 - 300°C Heat up time to thermal stabilization approx. 8 min Net weight: 18 kg Options: connection inert gas  $N^2$ 

with flow meter



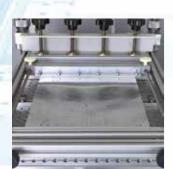

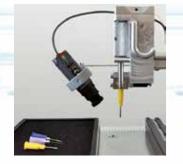

# SMT 3000 ECO BASIS

Manipulator for the production of prototypes and

small series. The patented Pick & Place head

enables easy handling of SMD components. The

modular system can be configured for any appli-

cation. The system realizes the entire process from

applying the solder paste or glue to assembling the

MANUAL PICK&PLACE-

MANIPULATOR

various components.

Manipulator for assembling SMD components

Features:

- Smooth-running XY portal with placement head in the Z axis
- With flexible magnetic circuit board holder, hand rest
- Holding rail with 5 tape feeders and universal component support
- Stand with 36 containers and vacuum pump
- Housing and palm rest powder-coated in light grey 7035



### **Dosing device**

The manipulator can be expanded to a dispenser by means of a compressor and a manual dosing device. In addition to solder paste and adhesive, other media can also be dispensed.

### **Component feeder**

The components can be provided in the belt as well as in bulk on the system for processing.

### Tape feeder

Tape feeders can stock standard components in large quantities at the workplace. When the cover tape is removed, the belt is automatically advanced and the components to be processed are exposed.

### Laboratory belt dispenser

The belt sections required for production can be processed with the laboratory belt dispenser. The individual components can be removed directly from the belt and there is no need to transfer them to bulk containers.

### **Bulk container**

The bulk goods container provides capacitors, resistors and ICs on the manipulator.

### Camera + Monitor (SMT 3000 ECO Plus)

Using a camera that can be adapted directly to the placement head, the entire placement process, from picking up to placing the component, can be shown enlarged on a monitor.



### **SMT 3000 ECO**

Assembling: Dimensions (LxWxH): Max. outreach (LxWxH): Max. PCB size (LxW): Min. PCB size (LxW): Max. assembling area (LxW): PCB thickness: Height underneath PCB: Max. component height: Hub of assembling head: Rotation anale: Weight: 220- 240 V AC, 5VA Power connection:

ca. 200-500 SMDs/hour 600 x 600 x 200 mm 600 x 840 x 200 mm 340 x 170 mm 8 x 8 mm 270 x 170 mm 0,5 mm bis ~10 mm max. 18 mm ca. 20 mm max. 25 mm 0-360° ca. 15 kg

# **PRINTSTAR 3000**

The stencil printer PrintStar 3000 manual printing machine with high precision is mainly designed for requirements of single or double-sided circuit board solder cream or red glue printing. The working platform is processed by cellular positioning hole with high-quality aluminum and its pedestal is welded by thick steel plate with steadiness and durability. Its characteristics are as follows:

- · Circuit board adopts positioning needle, fixed rod and fixed plate for positioning, which can ensure convenient positioning and accuracy of repeated operation.
- Make ready mode is made through stencil's movement and combined with fine adjustment and correction of X, Y axis in printing platform, which is convenient and quick.
- Stencil stent uses spiral bearing and height can be adjusted up and down, which is convenient to control PCB's thickness and volume of printing cream.
- Printing plates are fixed by four rotary knobs with platen and it is quick and strong.

# **HOTAIR 3000**

The HotAir 3000 is a stylish, practical reflow oven for manufacturing and reworking of SMT products.

The oven has a large display. The intuitive menu navigation is controlled by a membrane keyboard. The product uses highly efficient infrared heating elements and has several thermocouple temperature gauges.

very uniform.

With the HotAir 3000 all common alloys can be processed. The oven has an automatic error detection with alarm.



### **PRINTSTAR 3000**

Due to this and the precise evaluation in the microprocessor, the temperature curve of the reflow process is highly accurate and the temperature in the respective reflow sections


This product has a variety of applications such as reflow soldering, repairing, drying and so on. It is suitable for SMT small series. for research and development of electronic products, school, education and study. The operating system software is in english.

The stove is well insulated by a special aluminum silicate cotton, which reduces energy consumption, protects the circuit and allows optimal operation and keeps the temperature in the furnace constant.

### **HOTAIR 3000**

Power connection:	200 – 230 VAC. / 50-60 Hz		
Max. Power Consump	Max. Power Consumption: 2400 W		
Max. PCB-Board Size	: 350 x 300 mm		
Time Settings:	00:00 – 99:59 sec.		
Temperatur:	60 - 300 °C		
Setting Options:			
5 Phases adjustable in	n time and temperature:		
<ol> <li>Preheat,</li> </ol>	2. Heat, 3. Soldering,		
4. Holding	and 5. Cool down		
Working Modi:			
Automatic	Reflow-Soldering		
Permanent	Heating or Drying function		
Option to st	ore 4 different Reflow profiles		
Interface: Grafic disp	lay with Keyboard		
automatic	Alarm function		
Display of	Process progress		
Heatup Time:	ca. 8 min		
Dimensions (LxWxH)	): 504 x 500 x 314 mm		
Weight:	+/- 28 kg		



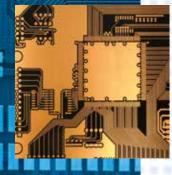

# RMP 210 / RMP 3545

### **MULTILAYER PRESS**

This high performance multilayer press was designed for PCB labs to enable quick prototyping of multilayer PCBs according to industry standards. Number of layers is only limited by the maximum lift of the press plates (38 mm). Using separating

metal sheets one can press a couple of boards over each other at the same time.

A compact and floor standing aluminium rack contains all parts of the unit including pressure supply, press plates and heaters.

The large loading door allows quick and easy access to the press chamber and is of course security switch protected.

A compressor, which is integral part of RMP 210 / RMP 3545 is stored in the back of the machine. In the front, you will find additional storage room for tools or boards (lower door).

The unit is controlled by two digital and adjustable thermostates, one digital timer as well as a pressure valve with pressure meter.


Four strong air ventilators are activated automatically during cooling cycle.

Steps of multilayer production with RMP 210 / RMP 3545:

- · Boards are pinned and stack is inserted into press plates.
- Pressure is created.
- Heater is activated.
- · Heating up procedure.
- Press procedure at preset temperature.
- Cooling down under pressure.
- PCB stack is taken out of the machine.

The entire sequence will take approx. 3 hours if you start at 20°C and take out the PCBs at a temperature of 30°C. If you take up protective measures, you can remove the boards at higher temperatures and insert a new stack. This way the press cycle reduces to approx. 45 min. Gross size of the PCBs is 250 x 350 mm (or 350 x 450 mm) which corresponds to a PCB net size of 210 x 300 mm (or 300 x400 mm). To register the layers of your multilayer you can use the register hole function of our software IsoCam and the Bungard Favorit fixes the layers with rivets.




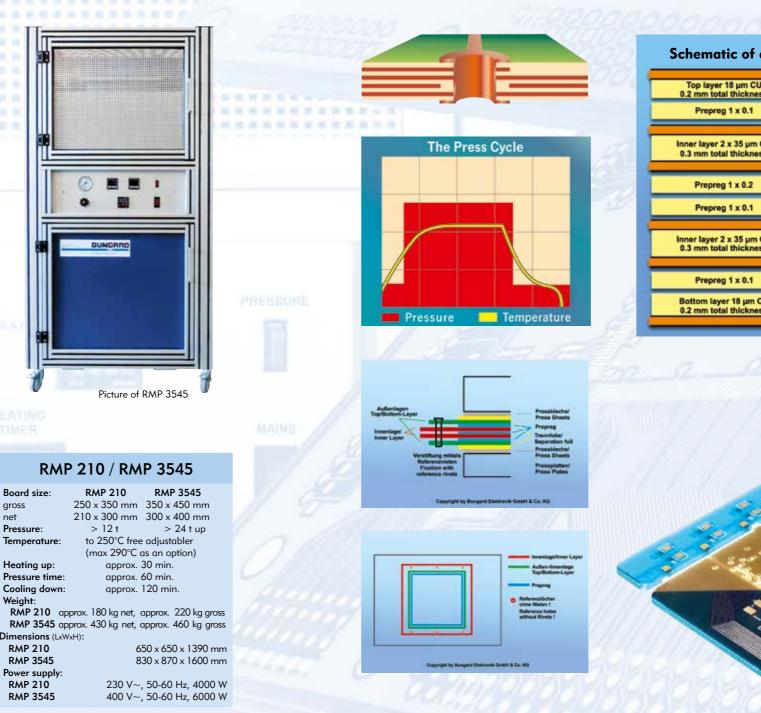





Weiaht

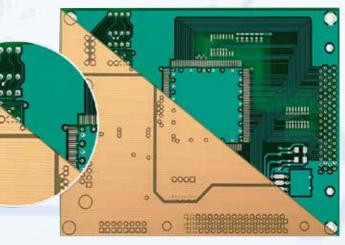

### Schematic of a 6-layer and a 4-layer PCB Top layer 18 µm CU 0.2 mm total thickness Top layer 18 µm CU 0.3 mm total thickness Prepreg 1 x 0.1 Prepreg 1 x 0.2 mm Inner layer 2 x 35 µm CU Inner layer 2 x 35 µm CU 0,5 mm total thickness 0.3 mm total thickness Prepreg 1 x 0.2 mm Prepreg 1 x 0.2 Bottom layer 18 µm CU 0.3 mm total thickness Prepreg 1 x 0.1 Inner layer 2 x 35 µm CU 0.3 mm total thickness Prepreg 1 x 0.1 Bottom layer 18 µm CU

# BUNGARD BEL

# WORLD-WIDE



In 1961, Heinz Hans Bungard (Picture) founded Bungard Elektronik GmbH & Co KG which is nowadays a global player with representatives in 62 countries of the world and 2 manufacturing plants in Germany









# GENERAL SALES

### Juli 20201. General

Our deliveries are exclusively subject to the conditions set forth herein which shall be deemed to be explicitly accepted by the purchaser. No conditions which may appear on the purchaser's order shall be binding on us, even without our express contradiction.

### 2. Quotations and orders

Our quotations are not binding on us. This applies also to information contained in price lists, leaflets etc.. Delivery dates stated in our quotations or given to the purchaser by any other means are approximate, and we endeavour to keep to them. Delays in delivery shall give no right to claims, unless we have explicitly confirmed such delivery dates and an adequate period of grace granted to us has expired. Orders shall only be binding on us when they are explicitly confirmed in writing, regardless of the form in which they have been placed with us. The data given in our catalogues are only product descriptions, and in no case they can be regarded as guaranteed characteristics. Furthermore the characteristics of our samples cannot be regarded as guaranteed characteristics.

### 3. Prices

Prices shall be valid only when confirmed by us in writing. They are exclusive of VAT at the current rate and incidentals such as postage and packing, freight, insurance etc..

### 4. Conditions of payment

4.1. Frequently buyers may be supplied on credit account. That must be negotiated before. Height of credit lines are depending on yearly overturn with BUNGARD during the last 12 months.

4.2. New customers, buying from Bungard since less than 1 year will not be supplied on credit.

4.3. For orders of less than 25 000 Euro, we insist in prepayment by SWIFT to our international bank account. Payments costs are born to buyer.

4.4. For orders of more than 25 000 Euro, buyer has to open an irrevocable LC, available and confirmed by any German bank, preferably Deutsche Bank. All LC costs and banking fees inside and outside Germany are to opener's account.

5. Set-off, right to retention

Only uncontested or legally binding counterclaims may be offset against our invoices. Any right to a retention to be exercised by the purchaser in connection with our claims is explicitly excluded.

### 6. Delivery

Delivery of our goods is explicitly made on behalf of and at the risk of the purchaser. The risk shall pass on to the purchaser when the ordered goods leave our premises. The same applies if goods are collected in our premises after notification of their readiness. We decide at our discretion on the most economical delivery method without assuming any liability for the chosen means of delivery.

### 7. Reservation of proprietary rights

7.1 All goods supplied shall remain our property until all of our claims resulting from the contract have been paid in full. The purchaser is entitled to dispose of the purchased goods in the ordinary course of business transactions. Reservation of proprietary rights also applies to products resulting from processing, mixing up or combining our goods with goods of third parties, in which case we are considered as manufacturers. In the case where our goods are processed, mixed up or combined with goods of third parties, and the proprietary rights of such third parties remain in force, we are entitled to co-ownership according to the proportion of the amount invoiced for such processed goods. Such right to co-ownership shall be safeguarded by the purchaser.

7.2 The purchaser shall transfer to us, as a security, his claims against third parties resulting from the resale of our goods in full or in the proportion of our co-ownership (see subparagraph 7.1). He is entitled to collect the amount of such claims on our behalf until revoked or until cessation of his payments made to us. The purchaser is not entitled to assign these claims to third parties.

7.3 The purchaser is not entitled to mortgage or transfer the goods which are subject to reservation by way of security.

7.4 The purchaser shall advise us immediately at any seizure of our goods or of any infringement of our rights by third parties.

7.5 In case of a default in payment or a deterioration in the financial situation, we are entitled to request immediate handing over of the goods which are subject to reservation. Any time limited claims shall immediately become due.

7.6 If the value of the securities exceeds our claims by more than 20%, securities to a corresponding amount will be released by us on request at our discretion.

8. Warranty and transport damages

We supply all our machines under a 12 month in-house warranty on parts and workmanship. This means that in this period of time, we repair or, at our choice, exchange, defective parts free of charge and at our facilities. This warranty does not cover transport fees.

Any user intervention to the machine / appliance will void the warranty, if not explicitly requested by us. Normal wear (i.e. on drive belts or spindle bearings) or damage from user intervention (i. e. pulling pc boards from units under tension) are not covered by this warranty.

Our local representative / dealer is in charge of technical assistance in any case of damage. Details of repair / exchange measures and coverage of transport fees are to be handled between our representative and us.

The purchaser shall check possible damages of our supplied goods on transit or transport immediately upon receipt and inform us in writing of visible defects at the latest 8 days after receipt. Complaints made at a later date will not be accepted by us. The purchaser shall give us the opportunity to convince ourselves of the rightfulness of the claim. If a claim is justified, we may repair the damage, supply replacements or refund the purchase price at our discretion. Further claims of the purchaser, especially claims for damages, are explicitly excluded, unless certain features of the goods had been assured by us. Claims for faulty delivery will in any event come under the statue of limitation six months after delivery.

### 9. Withdrawal

When delivery in accordance with the contract is not possible for reasons beyond our control, we are entitled to withdraw from the contract. Such withdrawal shall not entitle the purchaser to assert any right against us. **10. Place of performance and jurisdiction, applicable law** 


The exclusive place of performance and jurisdiction for both parties shall be 51570 Windeck Germany. Any contract shall be governed by the law of the Federal Republic of Germany.

### 11. Severability clause:

If any clause herein is or will become invalid, such clause shall not affect the validity of the remaining clauses. The invalid paragraph shall be replaced by a valid clause which shall meet as closely as possible the legal and commercial purpose of the original one.

Bungard Elektronik GmbH & Co. KG 51570 Windeck



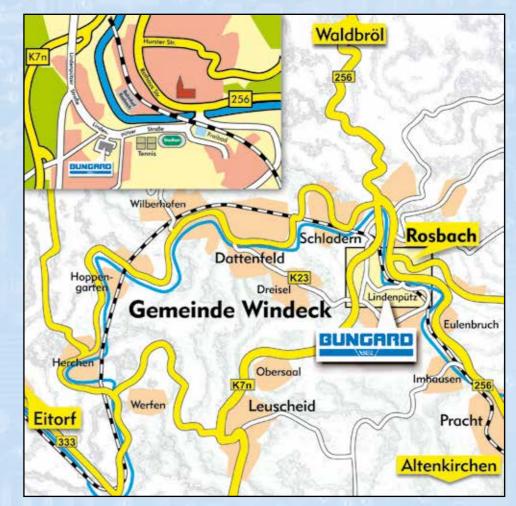

Address:



Bungard Elektronik GmbH & Co. KG Rilkestrasse 1 D-51570 Windeck

### Contact:

Phone:	+49 2292 / 9 28 28-0
Fax:	+49 2292 / 9 28 28-29
e-mail:	info@bungard.de
	sales@bungard.de
	support@bungard.de
Web:	www.bungard.com



